

## RF12818

G9 5600 lamp holder



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF12818**

G9 5600 lamp holder

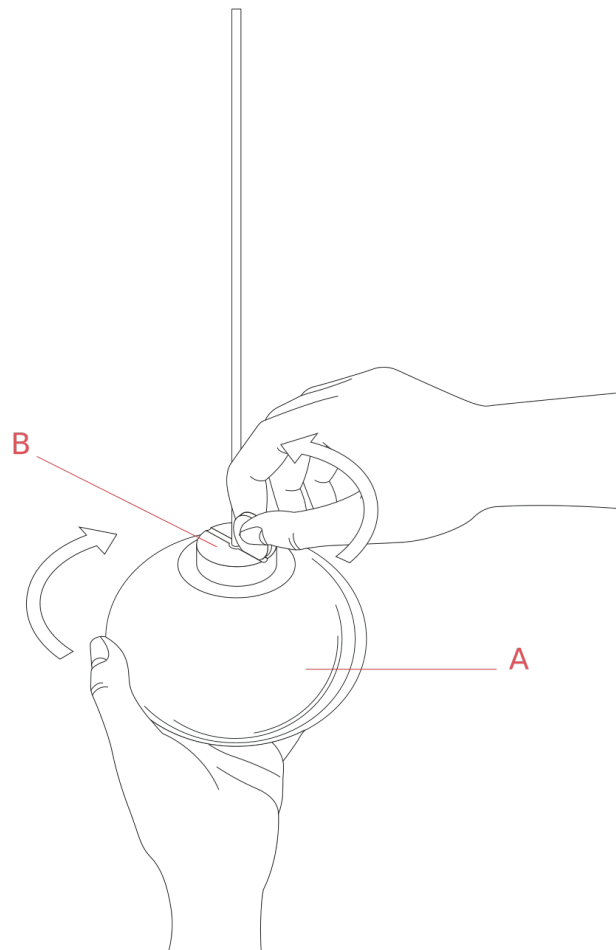


Fig.1

Unfasten the diffuser (A) from the support (B) by utilizing a coin or similar object, if necessary.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF12818**

G9 5600 lamp holder

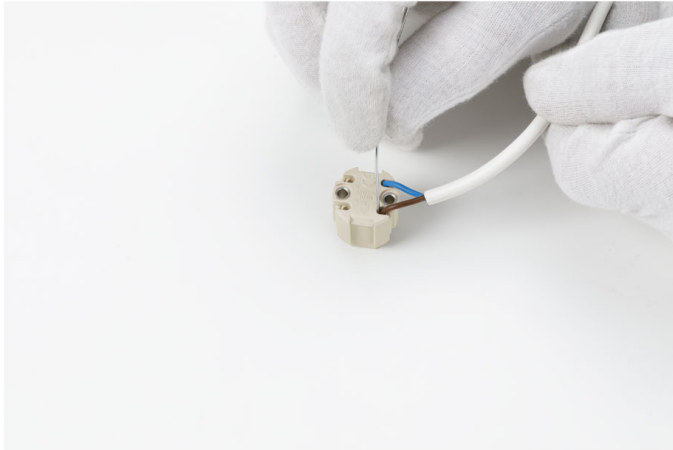


Fig.2

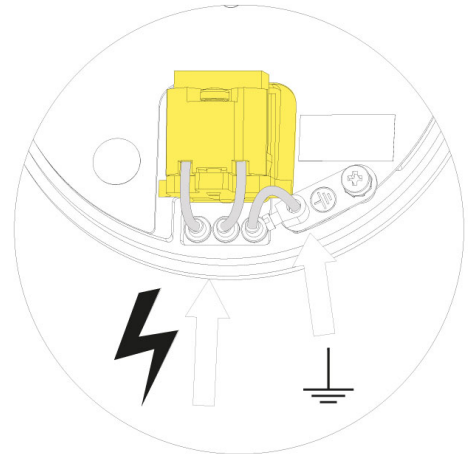


Fig.3

Remove the lamp-bulb (C).  
Free the lamp holder (D) from the support (B) by unfastening the two screws (E).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF12818**

G9 5600 lamp holder

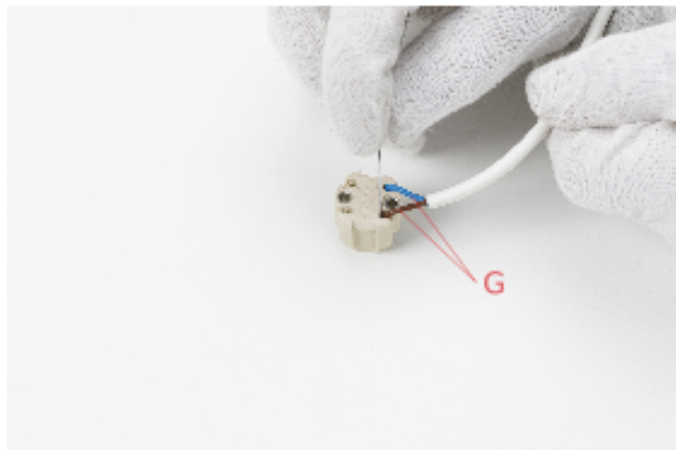


Fig.3

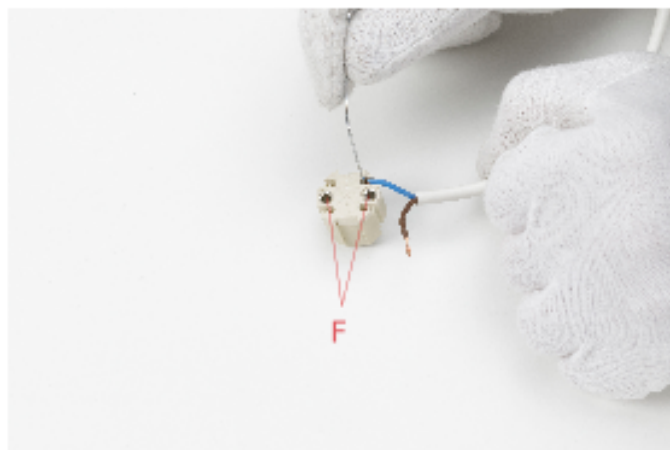


Fig.4

Disconnect the electrical wires (G) from the lamp holder by pressing the push terminals with a paper clip (F).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF12818

G9 5600 lamp holder



Fig.5



Fig.6

Assemble now the new spare-part:

Connect the electrical wires (H) to the "new" lamp holder terminals.

Connect the Brown "L" (live) wire in the terminal that corresponds to the letter "L" present on the lamp holder and then connect the Blue "N" (neutral) wire in the terminal "N".

N.B. The electrical wires are connected by pushing the wires inside the terminals, therefore it is necessary to verify that they are connected properly.

Assemble the lamp holder (D) to the support (B) by fastening the two screws (E).

Install the lamp-bulb (C).(Fig.2 page 2)

Insert the lamp-bulb and fasten the diffuser (A).

LAMP BULB REPLACEMENT – unfasten the diffuser (A) from the support (B) by utilizing a coin or similar object, if necessary, as shown in the image.(Fig.1 page 1)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF12818**

G9 5600 lamp holder

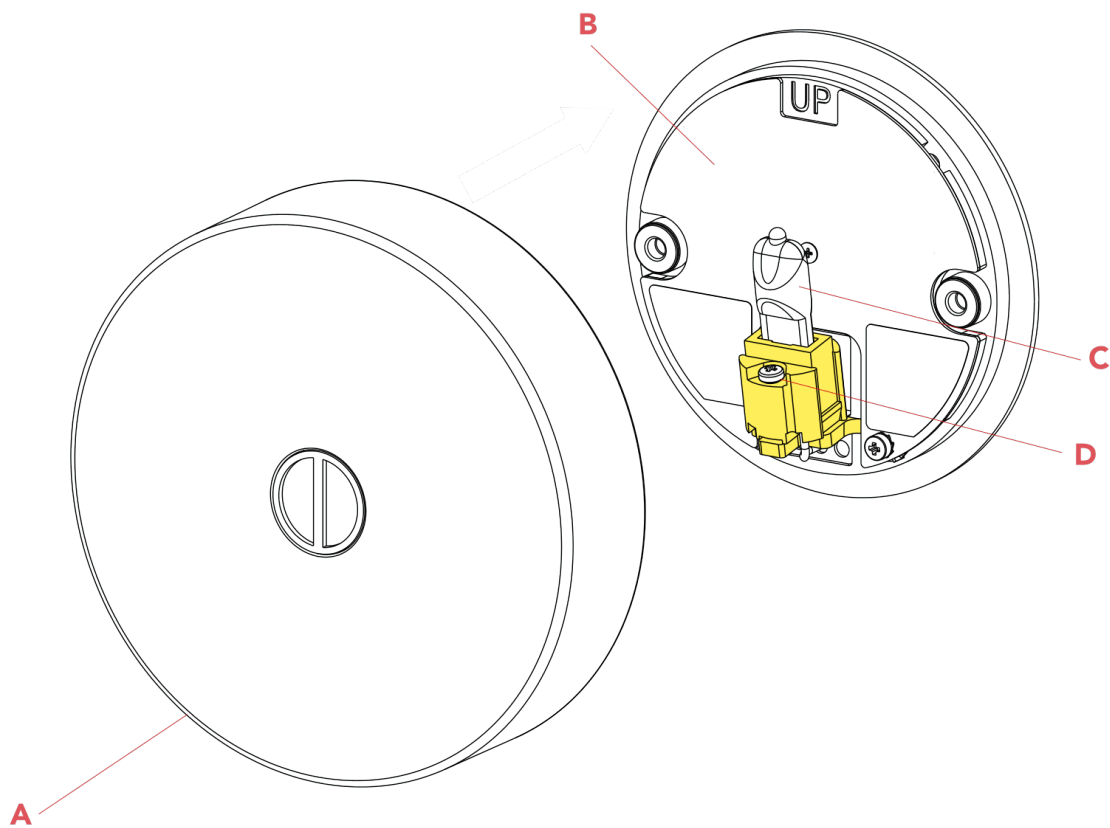


Fig.1

Unfasten the diffuser (A) from the lamp body (B).  
Remove the lamp-bulb (C).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF12818**

G9 5600 lamp holder



Fig.2

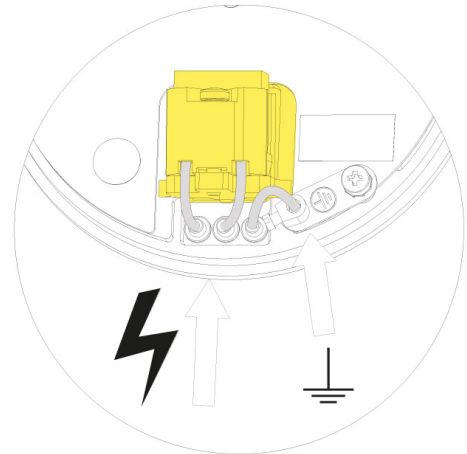


Fig.3

Disconnect the electrical feed wires (F) from the lamp holder by pressing the push terminals with a paper clip (H) and then disconnect the ground wire from the terminal (E).(Fig.2-3)

Assemble now the new spare-part:

Connect the electrical wires (F) to the lamp holder terminals.

Connect the Brown "L" (live) wire in the terminal that corresponds to the letter "L" present on the lamp holder and then connect the Blue "N" (neutral) wire in the terminal "N".

N.B. The electrical wires are connected by pushing the wires inside the terminals, therefore it is necessary to verify that they are connected properly.

Fix the lamp holder to its support by fastening the two screws (D) and then install the lampbulb (C).

Fasten the diffuser (A) to the lamp body (B). (Fig.1 page 5)

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.