

## RF28045

Led Rondo' dimmer 220/240v 40-250w – 100/127v 10-150w - 4-100w



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF28045

Led Rondo' dimmer 220/240v 40-250w – 100/127v 10-150w - 4-100w



Fig.1



Fig.2

Open the box of the damaged dimmer.  
For the opening, it is necessary to remove the rubber pad from underneath the dimmer box;  
Unfasten the screw that locks the triangle terminal cover;

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF28045

Led Rondo' dimmer 220/240v 40-250w – 100/127v 10-150w - 4-100w



Fig.3



Fig.4

Turn the dimmer box and remove the terminal cover;  
Unfasten the three screws of the cable clamps;

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF28045

Led Rondo' dimmer 220/240v 40-250w – 100/127v 10-150w - 4-100w



Fig.5

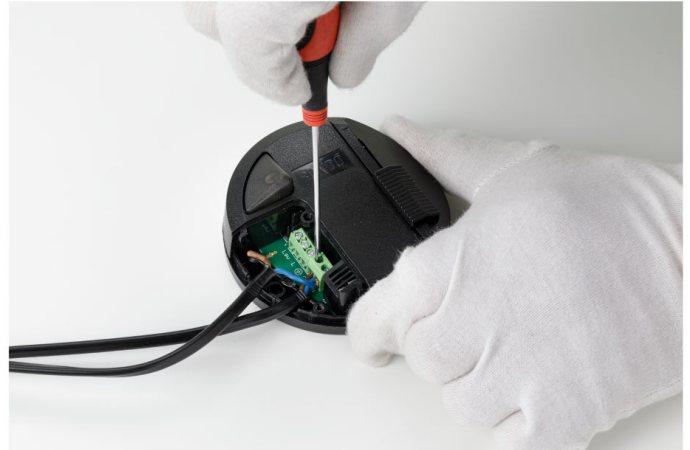


Fig.6

Remove the cable clamp (refer to fig. 5) and disconnect the cables from the green terminal box.

Assemble now the new dimmer:

Connect the cables respecting the polarities, lock the wires by positioning the cable clamp and then fasten the three screws, cover the green terminal box with the triangle cover, turn the dimmer box, fasten the screw and stick-on the rubber pads.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.