

**RF6255001**

silver diffuser assembly



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF6255001**

silver diffuser assembly

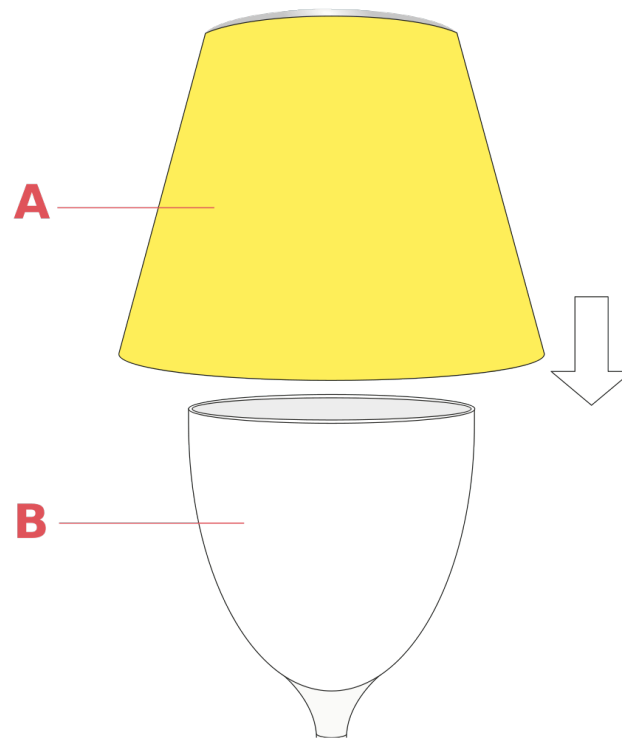


Fig.1

Lock the external diffuser (A) to the inner diffuser (B) by forcing (pushing) it to clicks-on.  
To lock the Soft version diffusers, it is necessary to locate the diffuser (A) on top of the inner diffuser (B) and force it harder in way that it clips-on to the diffuser (B).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.