

ΕN

RF1367035

Red rose assembly



ΕN

RF1367035

Red rose assembly

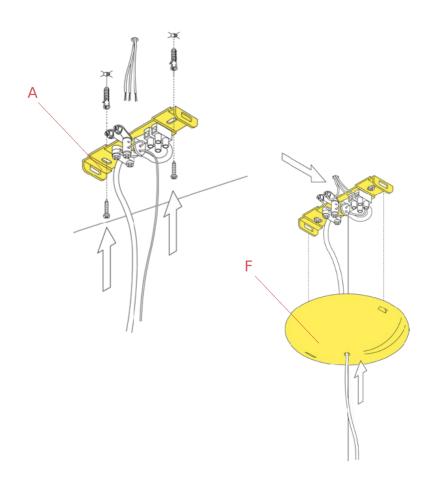


Fig.1

Fix the wall fixture (A) with the appropriate expansion bolts.

NOTE: Select and employ screw anchors which are suited to the surface where the appliance is to be installed.

Connect the power cable to the terminal box (not supplied with the sparepart).

Mount the ceiling-rose (F).