

RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly

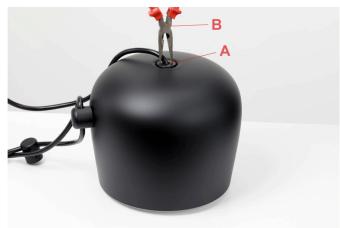




Fig.1 Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly



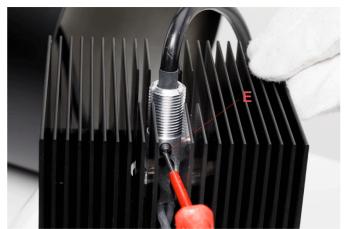



Fig.3 Fig.4

Lift-up the varnished body (C) from the internal body (D).

Unscrew the screw (E).

RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly

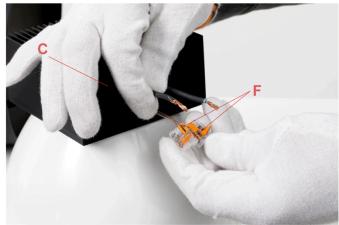

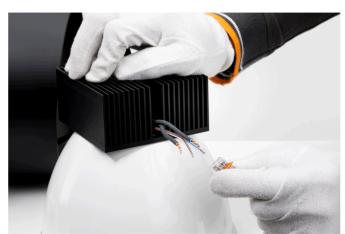


Fig.5 Fig.6

Disconnect the cables from the clamps (F). Loosen the electrical cable from the sink.



RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly

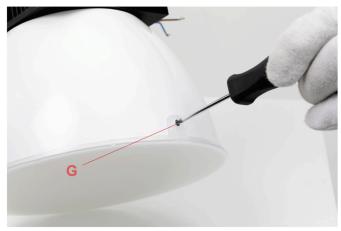




Fig.7 Fig.8


Unscrew the 4 screws (G) from the white reflector.

Remove the diffuser.



RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly

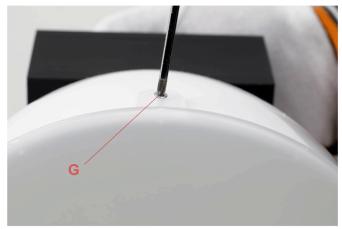

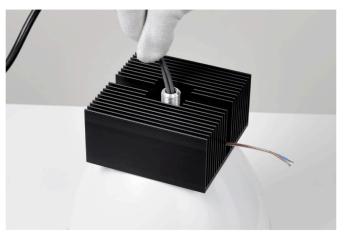


Fig.9 Fig.10

Screw the 4 screws (G) to the white reflector.

NOTE!

Do not screw so fast!!!

Insert the electrical cable in the sink.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly

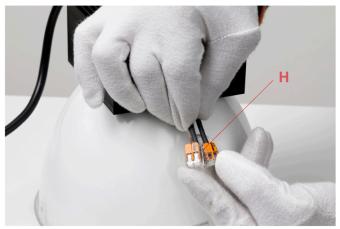




Fig.11

Fig.12

Connect the cables to the new clamps (H).

NOTE! Respect the polarity of the cables.

Screw the screw to fix the electrical cable.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly





Fig.13

Fig.14

Insert the new internal body (D) in the varnished body (C).

Re-assemble the Joint (A).

Screw the joint (A) with a pair of pliers (B).(Fig.1 page 13)