

# RF3170100

Ic Suspension 1 E14 lamp holder assemly



# RF3170100

Ic Suspension 1 E14 lamp holder assemly

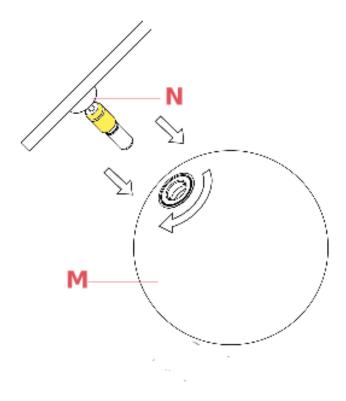


Fig.1

Unfasten the glass diffuser (M) and lamp-bulb from the lamp fixture.

### RF3170100

Ic Suspension 1 E14 lamp holder assemly

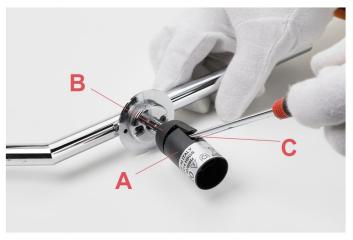




Fig.2 Fig.3

Unhook the lamp holder (A) from the lamp holder support (B) by inserting a flat screwdriver through the 2 lateral openings (C).

At this point break the lamp holder (A). Ensure to leave the electrical conductors intact and do not cut the wires.

### RF3170100

Ic Suspension 1 E14 lamp holder assemly





Fig.4 Fig.5

Unfasten the screw (D) and remove the lamp holder support (E) by unfastening it from the threaded pin (F).

Assemble now the new spare-part:

Fasten the lamp holder support (E) to the threaded pin (F) and lock the support onto the threaded pin (F) by fastening the screw (D).

#### RF3170100

Ic Suspension 1 E14 lamp holder assemly

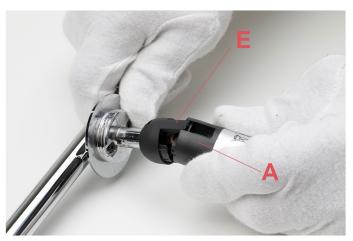




Fig.6 Fig.7



Fig.8

Connect the electrical conductors by pushing the wires inside the lamp holder terminals with a pair of pliers. Connect the electrical wires of the lamp holder. Connect the Brown "L" (live) wire in the terminal that corresponds (opposite side) to the centre brass contact of the lamp holder and then connect the Blue "N" (neutral) wire in the other terminal.

HITS!!! The electrical wires are connected by pushing the wires inside the terminals, therefore it is necessary to verify that they are connected properly.

At this point lock the lamp holder (A) to the support (E) by pushing it against the 2 lateral hooks. The support has two lateral hooks. This allows the lamp holder (A) to fix on the support (B).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.