

# RF0095500

Aim small opal diffuser



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

# RF0095500

Aim small opal diffuser

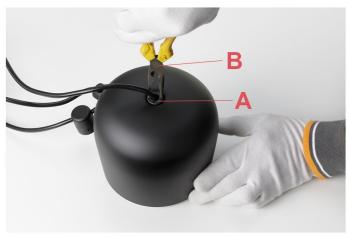




Fig.1 Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).



# RF0095500

Aim small opal diffuser





Fig.3 Fig.4

Lift up the varnished body (C) from the internal body (D). Unscrew the 3 screws (G) from the white reflector.



## RF0095500

Aim small opal diffuser



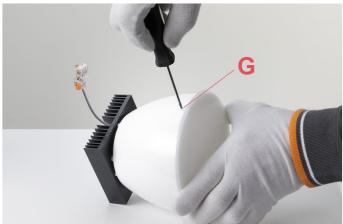


Fig.5 Fig.6

Remove the diffuser. NOTF!

Do not screw so fast!!!
Insert the new internal body (D) in the varnished body (C).(Fig.3 page 22)
Reassemble the Joint (A).(Fig.1 page 21)
Screw the joint (A) with a pair of pliers (B).(Fig.1 page 21)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

# RF0095500

Aim small opal diffuser

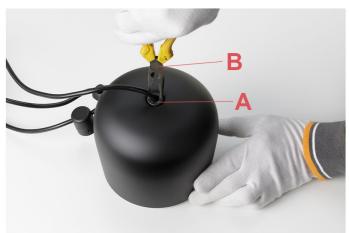




Fig.1 Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).



# RF0095500

Aim small opal diffuser

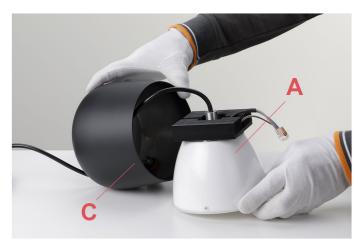




Fig.3 Fig.4

Lift up the varnished body (C) from the internal body (D). Unscrew the 3 screws (G) from the white reflector.



## RF0095500

Aim small opal diffuser



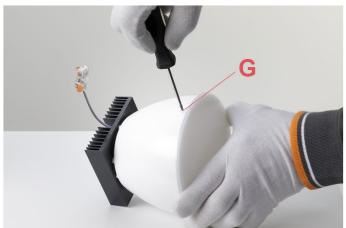


Fig.5 Fig.6

Remove the diffuser. NOTF!

Do not screw so fast!!!

Insert the new internal body (D) in the varnished body (C).(Fig.3 page 22)

Re-assemble the Joint (A).(Fig.1 page 21)

Screw the joint (A) with a pair of pliers (B).(Fig.1 page 21)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.