ΕN



FRISBI F2500000

RF01439

GRID SUPPORT WITH STEM





ΕN

FRISBI F2500000

RF01439

GRID SUPPORT WITH STEM

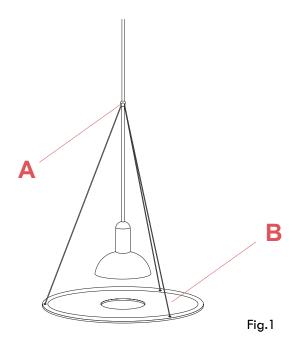

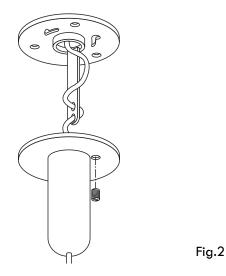

Remove the Plexiglas diffuser (B) by unhooking the steel suspension wires from the "tige" rod clamp (H).

Unfasten the ceiling rose screw and then disconnect the lamp electrical wires from the electrical terminal box;

WARNING!!! During this operation it is necessary to hold the "tige" rod and reflector with one hand to avoid causing damages towards people or objects.

ΕN



FRISBI F2500000

RF01439

GRID SUPPORT WITH STEM


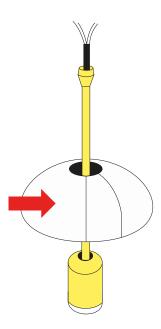


Fig.3

Fig.4

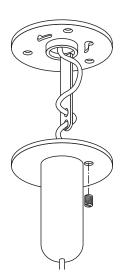

Remove the electrical cable from the wall attachment and ceiling rose and afterwards remove the reflector from the "tige" rod.

Assemble now the new spare-part:

Slide the reflector through the cable and the "tige" rod, insert the electrical cable through the ceiling rose, cut the electrical cable to the desired length and strip-off the isolation of the cable and the wires. Connect the wires to the terminal box and then fasten the ceiling rose screw.

Install the plexiglass diffuser by hooking the three suspension wires to the rod clamp.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.