


Designed by Michael Anastassiades, 2020


F1801033

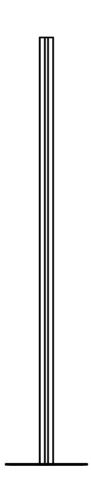



ΕN

F1801033

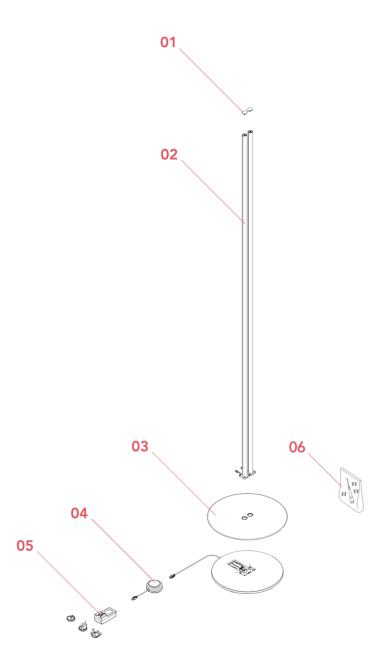

- 01. RF31068 Fixing bridge assembly
- 02. RF1800033 Body and block assembly
- 03. RF31826 Base upper cover
- **04. RF27549** Switch dimmer 48V PWM 500 Hz
- **05. RF3320400** Black plug kit & Driver
- **06. RF29554** Key and screws assembly



ΕN

RF31068

FIXING KIT ASSEMBLY



ΕN

COORDINATES F F1801033

RF31068

FIXING KIT ASSEMBLY

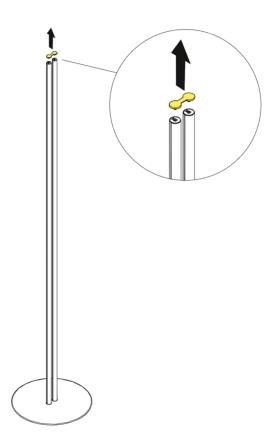


Fig.1

Remove the fixing kit assembly from the body.

Now assemble the new spare part.



ΕN

RF1800033

BODY AND BLOCK ASSEMBLY



ΕN

RF1800033

BODY AND BLOCK ASSEMBLY

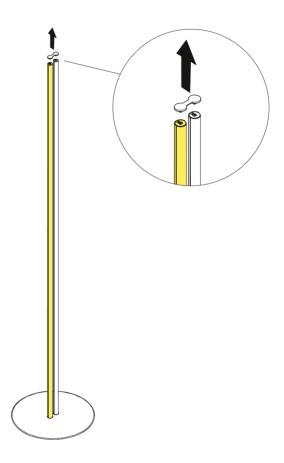


Fig.1

Remove the fixing kit assembly from the body.

ΕN

RF1800033

BODY AND BLOCK ASSEMBLY

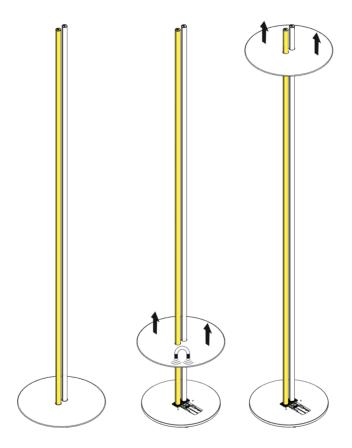


Fig.2

Remove the base upper cover.

ΕN

RF1800033

BODY AND BLOCK ASSEMBLY

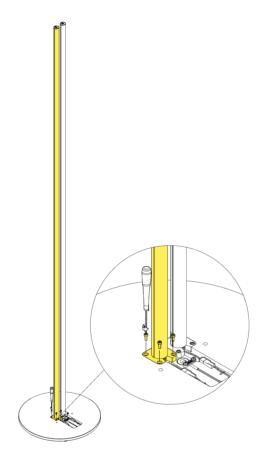


Fig.3

Unfasten the n°4 screws.

ΕN

RF1800033

BODY AND BLOCK ASSEMBLY

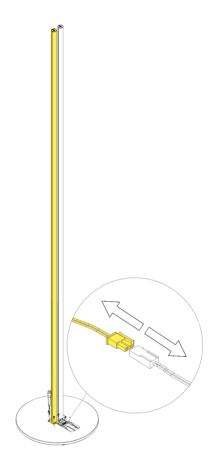


Fig.4

Disconnect the pins.

ΕN

RF1800033

BODY AND BLOCK ASSEMBLY

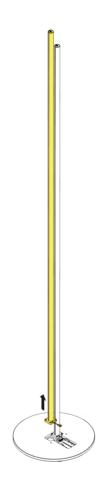


Fig.5

Remove the damaged body and block assembly.

Assemble now the new spare parts. Position the new body and block assembly (Fig.5).

Connect the pin (Fig.4 page.9)

Fast the n°4 screws (Fig.3 page 8)

Connect the base upper cover (Fig.2 page 7)

Put the fixing kit assembly on the body (Fig.1 page 6).



ΕN

RF31826

BASE UPPER COVER



ΕN

RF31826

BASE UPPER COVER

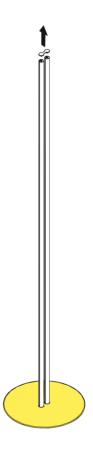


Fig.1

Remove the fixing kit assembly from the body.

ΕN

RF31826

BASE UPPER COVER

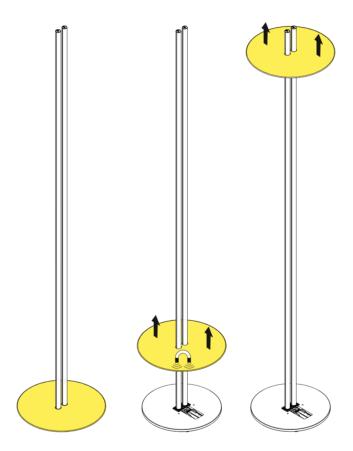


Fig.2

Remove the base upper cover.

Now assemble the new spare part. Connect the new base upper cover (Fig.2 page 13)

Put the fixing kit assembly on the body (Fig.1 page 12).




ΕN

RF27549

SWITCH DIMMER 48V PMW 500Hz



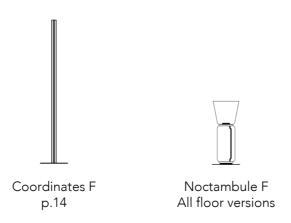

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF27549

SWITCH DIMMER 48V PMW 500Hz

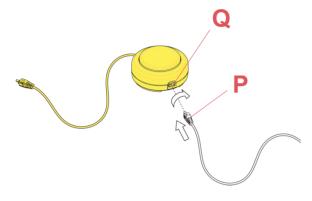


Fig.1

Connect the plug (P) to the push button switch (Q) locking it by turning it 90° clockwise.

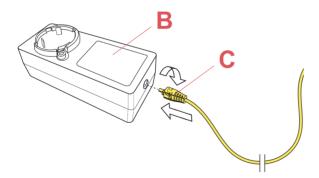


Fig.2

Connect the plug (C) to the power unit (B) locking it in by rotating it 90° clockwise.




ΕN

RF3320400

BLACK PLUG & KIT DRIVER





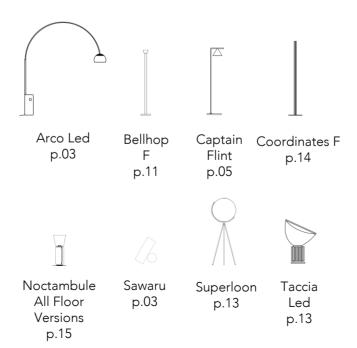

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF3320400

BLACK PLUG & KIT DRIVER

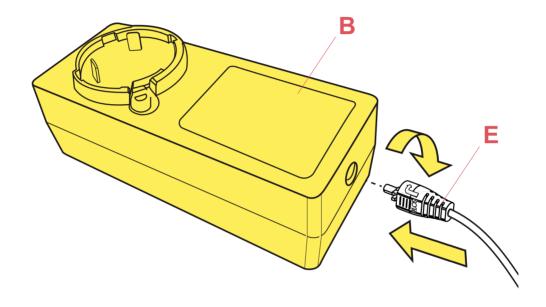


Fig.1

Insert the plug (E) into the power unit (B). By using the guides, snap the plug inside its apposite slot (use the correct type of plug for the country in which the device must be installed).



ΕN

RF29554

KEY AND SCREWS ASSEMBLY

