

**RF7542100**

Base for To-Tie Table 2



**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

# RF7542100

Base for To-Tie Table 2

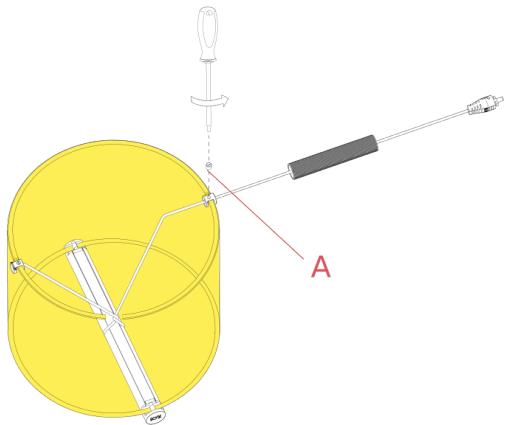


Fig.1

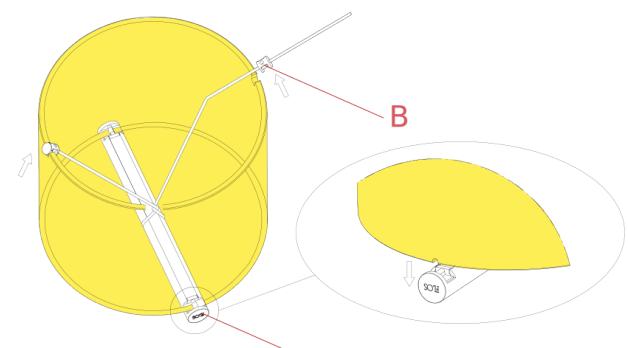


Fig.2

Unfasten the screws (F) through the Allen key tool (E). (Fig.1)  
Remove the body (D) of the device from the wall attachment (A) by unhooking it from the hooks (E) present on the wall attachment. (Fig.2)  
Disconnect the female connector (C) from the male connector (G). (Fig.3)

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

# RF7542100

Base for To-Tie Table 2

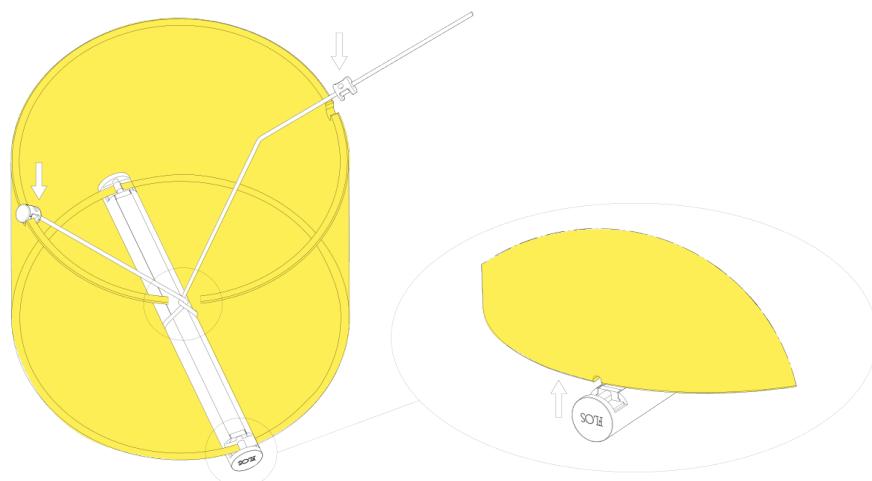


Fig.3

Unfasten the two connector fixing screws (B). (Fig.4)

Unfasten the two diagonal screws (H) that fix the driver bracket (I) to the lamp body. (Fig.5)

Lift-up the driver bracket (I) from the lamp body.

Disconnect the connectors (J) and unfasten the driver screws (K). (Fig.7)

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

# RF7542100

Base for To-Tie Table 2

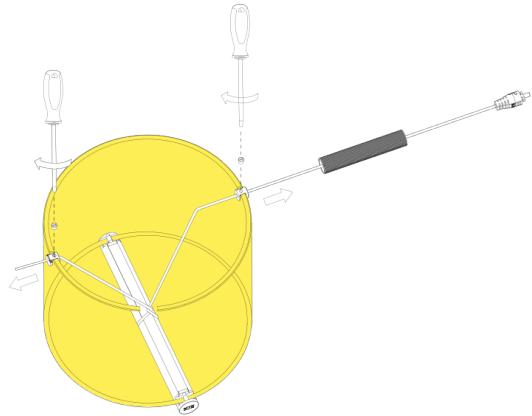


Fig.4

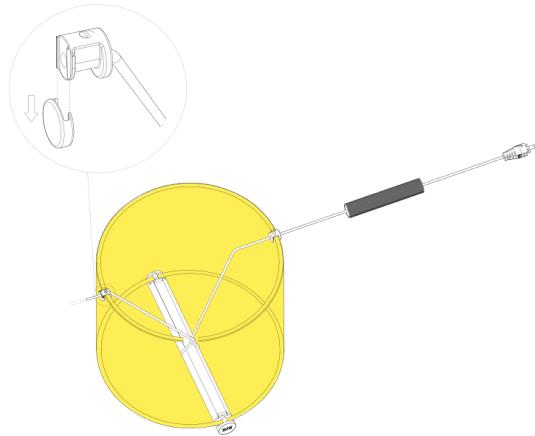


Fig.5

Unfasten the screws (F) through the Allen key tool (E). (Fig.1)

Remove the body (D) of the device from the wall attachment (A) by unhooking it from the hooks (E) present on the wall attachment. (Fig.2)

Disconnect the female connector (C) from the male connector (G). (Fig.3)

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.