

# RF85863

Lamp holder assembly



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.



## RF85863

Lamp holder assembly

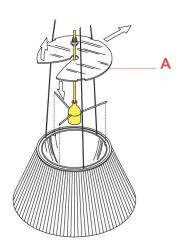




Fig.1 Fig.2

Remove the anti-dust screen (A) by bending the sides of the screen and removing it from the electrical cable.

Pull-out the damaged lamp holder assembly (B) from the appliance.

Unhook the three lamp supports (C) from the lamp holder assembly (B).

## **RF85863**

Lamp holder assembly

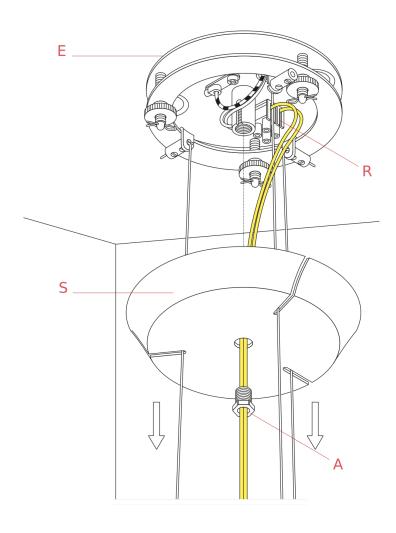


Fig.3

Unfasten the plastic nut (D) and lower down the ceiling coupling (S) from the ceiling attachment (E).

Disconnect the electrical conductors from the terminal box (R).

Free the electrical wire by sliding it out from the ceiling coupling (S) and from the plastic nut (D).

## RF85863

Lamp holder assembly

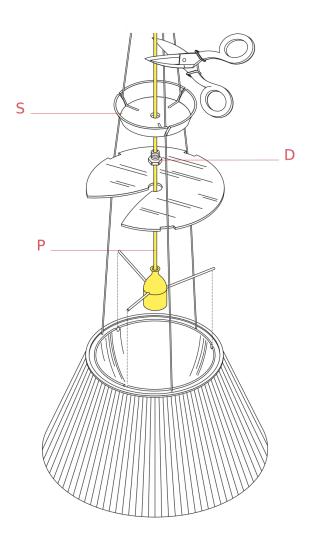


Fig.4

Assemble now the new spare-part:
Insert the electrical cable (P) through the plastic nut (D) and then through the ceiling coupling (S).
Adjust the length of the electrical cable (P).



#### **RF85863**

Lamp holder assembly

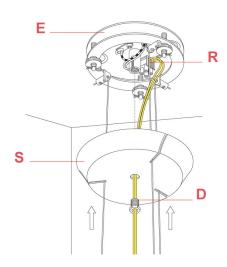




Fig.5 Fig.6

Connect the electrical conductors to the terminal box (R). Assemble the ceiling coupling (S) to the ceiling attachment (E) by fastening the plastic nut (D).

Hook the three supports (C) to the lamp holder assembly (B).

Collocate the electrical assembly (B) inside the internal glass diffuser (C), ensuring that the three lamp holder supports are hooked on the three openings (D) present on the glass diffuser (C).

# RF85863

Lamp holder assembly

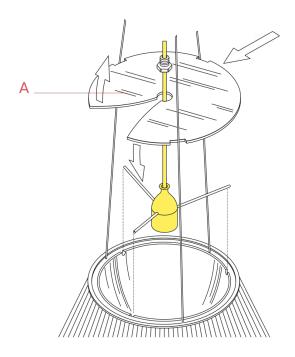


Fig.7

Insert the anti-dust screen (A) by bending the sides of the screen and inserting it through the electrical cable.