

# RF0095600

Aim Small Heatsink, 2700K Led Module & Reflector Assembly



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0095600

Aim Small Heatsink, 2700K Led Module & Reflector Assembly

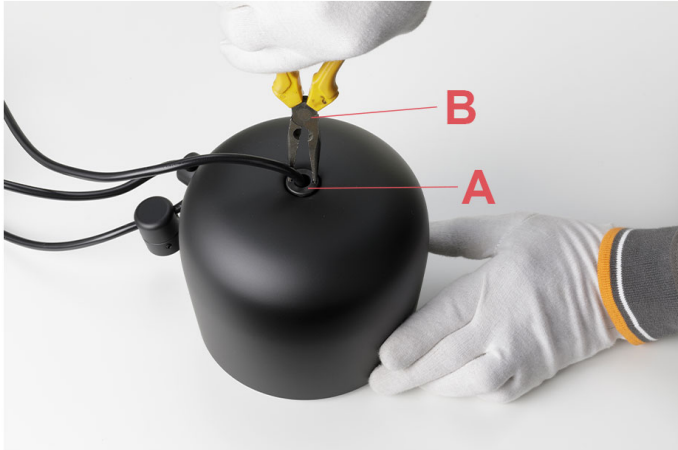


Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF0095600**

Aim Small Heatsink, 2700K Led Module &amp; Reflector Assembly

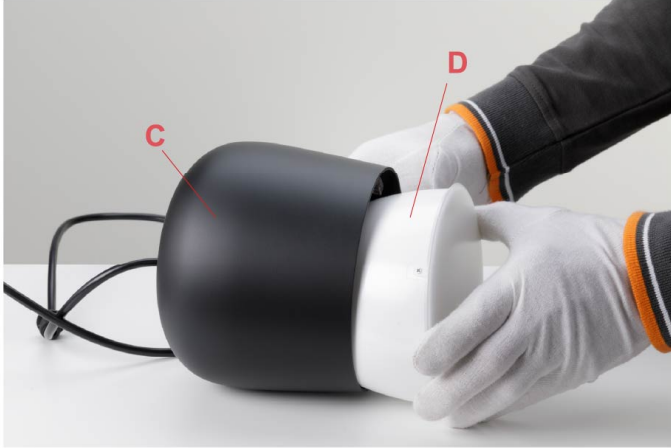


Fig.3

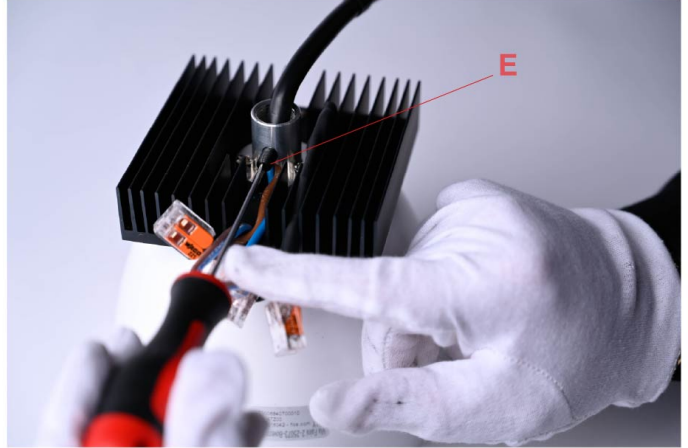


Fig.4

Lift-up the varnished body (C) from the internal body (D). Unscrew the screw (E).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

## RF0095600

Aim Small Heatsink, 2700K Led Module & Reflector Assembly

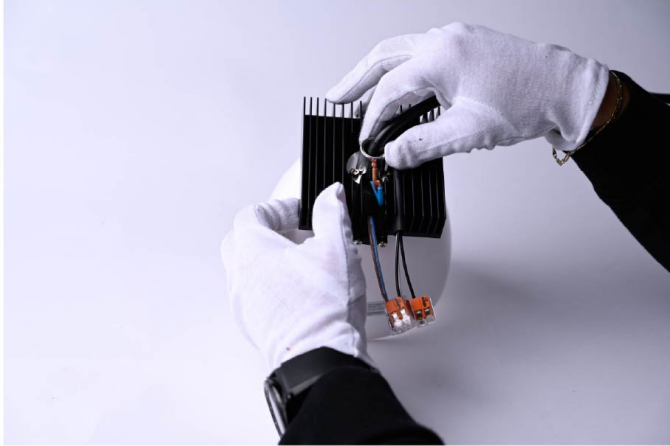


Fig.5



Fig.6

Disconnect the cables from the camps. Loosen the electrical cable from the sink. Unscrew the 4 screws (G) from the white reflector.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF0095600**

Aim Small Heatsink, 2700K Led Module &amp; Reflector Assembly



Fig.7

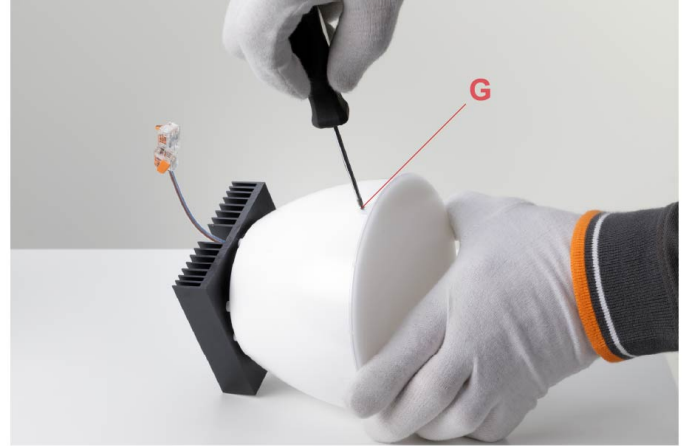


Fig.8

Remove the diffuser. crew the 4 screws (G) to the white reflector.  
NOTE! Do not screw so fast!!

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0095600

Aim Small Heatsink, 2700K Led Module & Reflector Assembly

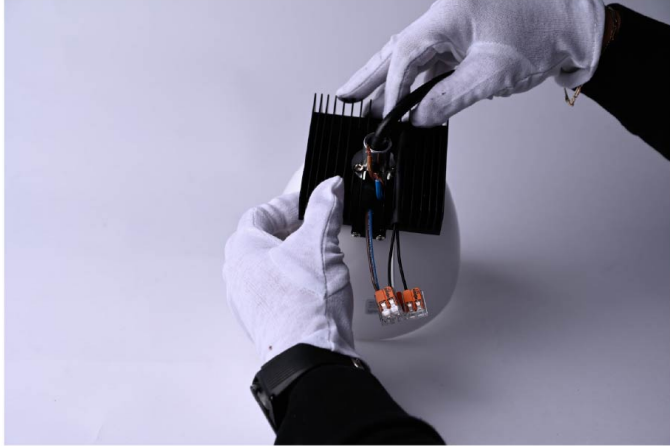


Fig.9

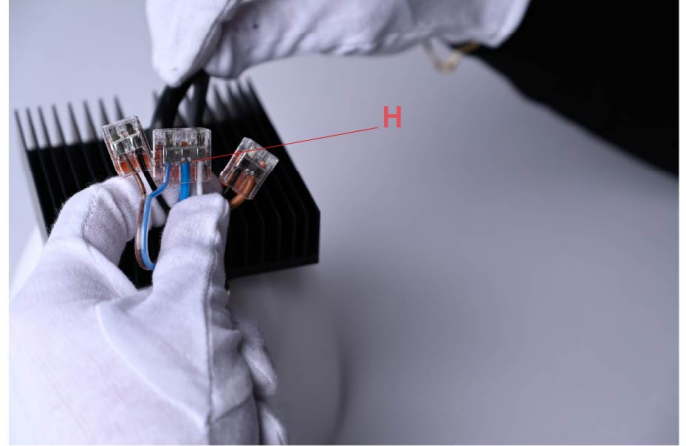


Fig.10

Insert the electrical cable in the sink. Connect the cables to the new clamps (H). NOTE! Respect the polarity of the cables.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0095600

Aim Small Heatsink, 2700K Led Module & Reflector Assembly

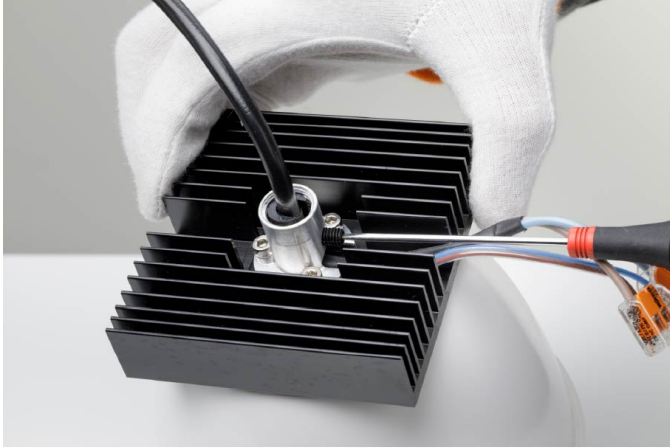


Fig.11



Fig.12

Screw the screw to fix the electrical cable. Insert the new internal body (D) in the varnished body (C).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0095600

Aim Small Heatsink, 2700K Led Module & Reflector Assembly



Fig.13

Re-assembled the joint (A). Screw the joint (A) with a pair of pliers (B)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.