

# RF16322

Dimmer rt99 pcg 230V



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF16322**

Dimmer rt99 pcg 230V



Fig.1



Fig.2

Open the dimmer box of the damaged dimmer;  
To open the box, it is necessary to Insert in one at a time in the openings (A) a tiny flat screw driver (B) and physically lever and force with your hand the dimmer box housing to open;

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF16322

Dimmer rt99 pcg 230V

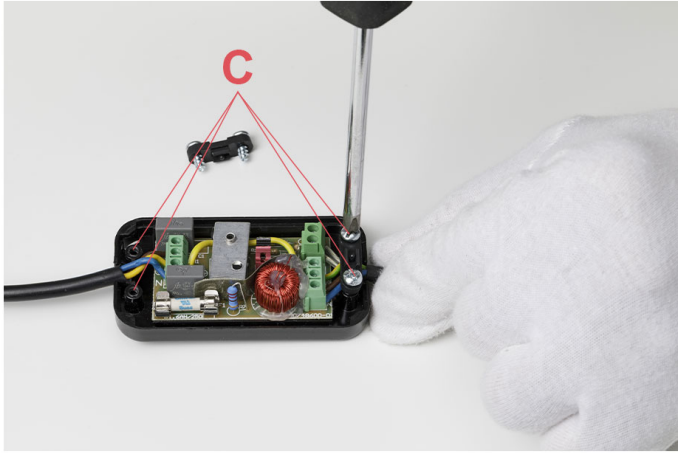


Fig.3



Fig.4

Unfasten the 4 screws (C) of the cable clamps by utilizing a cross headed screw driver;

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF16322

Dimmer rt99 pcg 230V

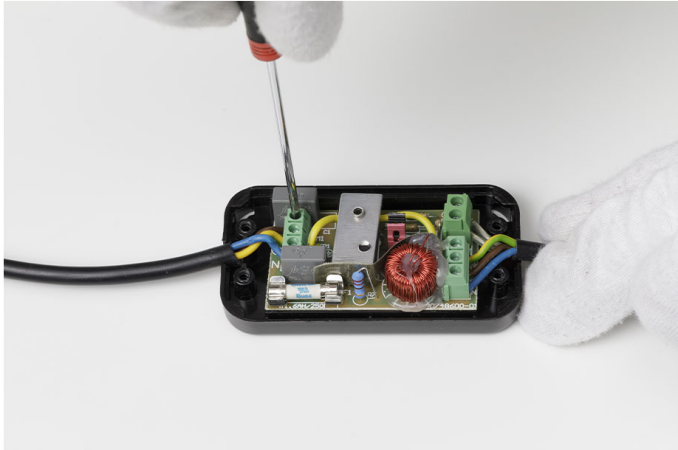


Fig.5

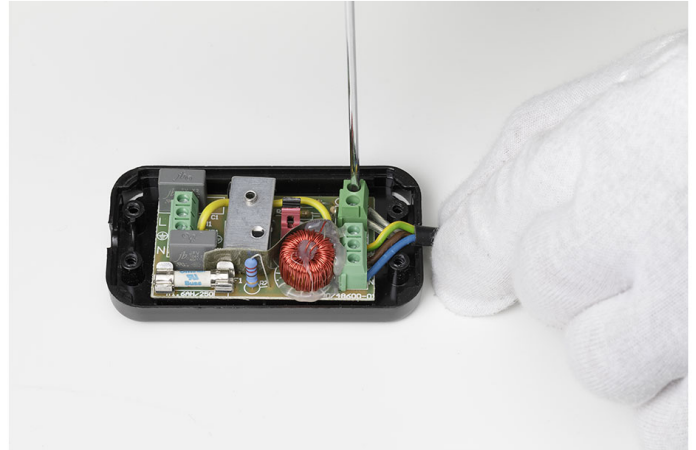


Fig.6

Disconnect the wires from the terminal box through a tiny flat-headed screw driver.

When connecting the wires it is necessary to respect the polarities (L= Brown and N= Blue).

Connect the wires of the push button (white and grey) and then the wires brown and blue (conductors of the lamp)

Connect the transparent wires of the plug cable to the L&N terminal box.

Lock the electrical cables by fastening the screws of the cable clamps and make sure to block the isolation of the electrical cable.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF16322

Dimmer rt99 pcg 230V



Fig.7



Fig.8

### REMARKS:

If you have a wall socket commanded through an ON OFF switch, remove the red jumper present on the printed circuit board. This operation allows you to command the lamp through the remote wall ON OFF switch.

N.B. The dimmer when commanded through the remote wall switch, it will switch ON OFF the lamp to the maximum light intensity. The dimmer memorizes the last light intensity level set.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF16322

Dimmer rt99 pcg 230V



Fig.9



Fig.10

Close the dimmer housing.

It is necessary to press on the lateral sides of the dimmer casing and make sure that it clicks in.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.