

ΕN

RF28737

DIMMER LED 220-240V



ΕN

RF28737

DIMMER LED 220-240V

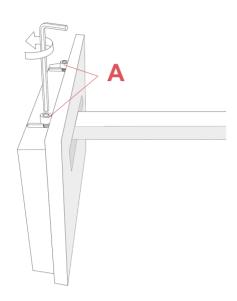


Fig.1

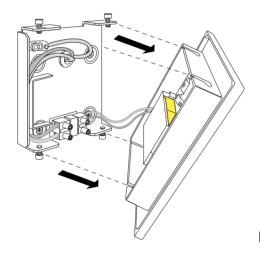


Fig.2

Unfasten the screws (A) and remove the lamp body from the wall attachment.

ΕN

RF28737

DIMMER LED 220-240V


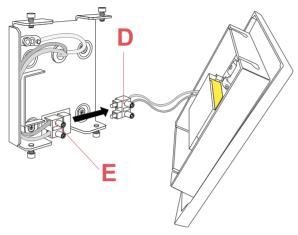


Fig.3

Disconnect the male connector (D) from the female connector (E).

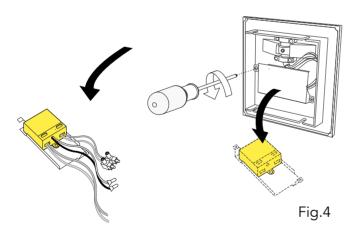

Open the dimmer box of the damaged dimmer by unfasten the screws;

ΕN

RF28737

DIMMER LED 220-240V


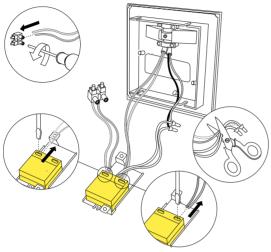


Fig.5

Disconnect the cables from the terminal boxes (I) through a tiny flat headed screw driver;

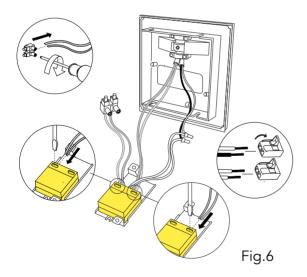

Assemble now the new spare part:

Replace the dimmer and connect the cables. When connecting the cables It is necessary to respect the polarities.

ΕN

RF28737

DIMMER LED 220-240V


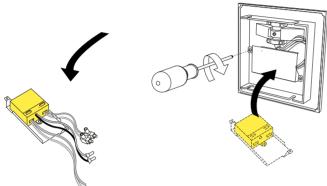


Fig.7

Close the dimmer box.

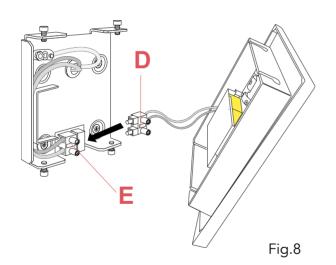

Connect the male connector (D) from the female connector (E).

Fasten the screws (A) and position the lamp body on the wall attachment. (Fig.1)