

RF3160200

Ic Suspension 2 E27 lamp holder assembly



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF3160200

Ic Suspension 2 E27 lamp holder assembly

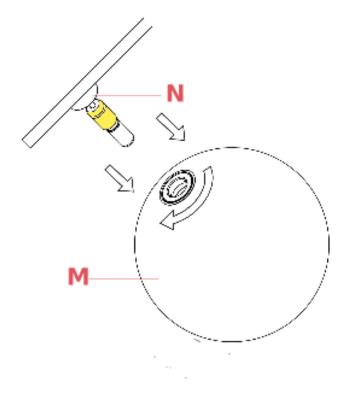


Fig.1

Unfasten the glass diffuser (M) and lamp-bulb from the lamp fixture.



RF3160200

Ic Suspension 2 E27 lamp holder assembly

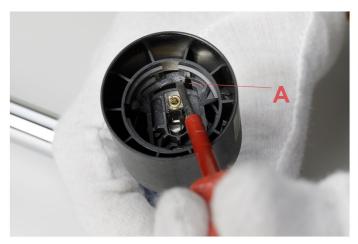




Fig.2 Fig.3

By utilizing a tiny flat screw driver, carefully push towards the inside, the lateral spring (A) of the lamp holder.

Unfasten the lamp holder sleeve (B) from the support (C).



RF3160200

Ic Suspension 2 E27 lamp holder assembly

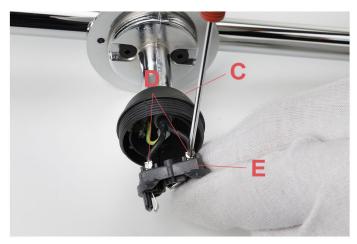




Fig.4 Fig.5

Disconnect the wires from the fitting (E) electrical terminals (D). Remove the fitting (E) from the support (C) and disconnect the earth wire from the terminal (F).

RF3160200

Ic Suspension 2 E27 lamp holder assembly





Fig.6 Fig.7

Unfasten the screw (G) and remove the support (C) by unfastening it from the threaded pin (H).

Assemble now the new spare-part:

Fasten the lamp holder support (C) to the threaded pin (H) and lock the support onto the threaded pin (H) by fastening the screw (G). (Fig.6-7)

Connect the earth wire to the terminal (F) and then connect the electrical wires by respecting the polarities to the fitting (E) terminals (D).(Fig.6 page 15)

Position the fitting (E) into the support (C) and fasten the lamp holder sleeve (B).(Fig.4 page 14)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.