

F6500000 Splügen Bräu

EN

RF6500109

Splügen Brau Complete ceiling rose



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

F6500000 Splügen Bräu

EN

RF6500109

Splügen Brau Complete ceiling rose

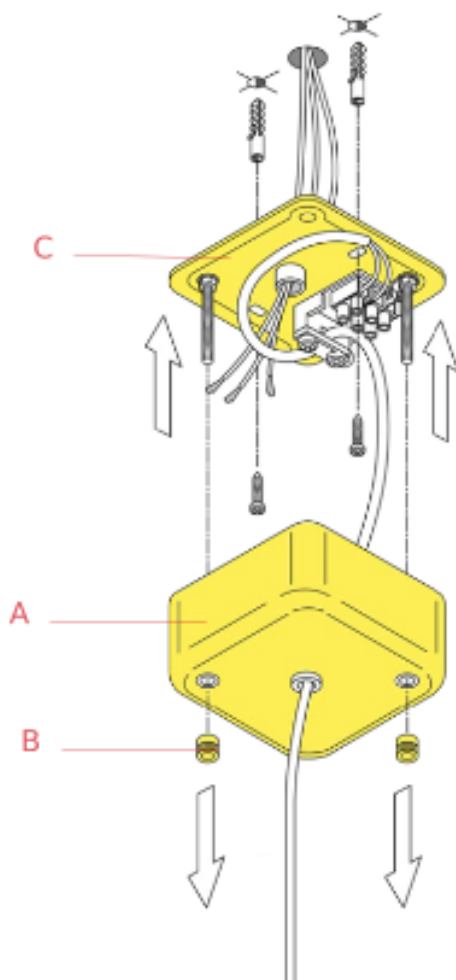


Fig.1

Open the washer (A) by unscrewing the pawls (B). Fasten the wall bracket (C) using the stud bolts. NOTE : Choose screw anchors that are suitable for the surface which shall be assembled upon.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.