

265 A0300009

EN

## RF02563

WHITE TRIANGLE STEM SUPPORT



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

265 A0300009

EN

**RF02563**

WHITE TRIANGLE STEM SUPPORT

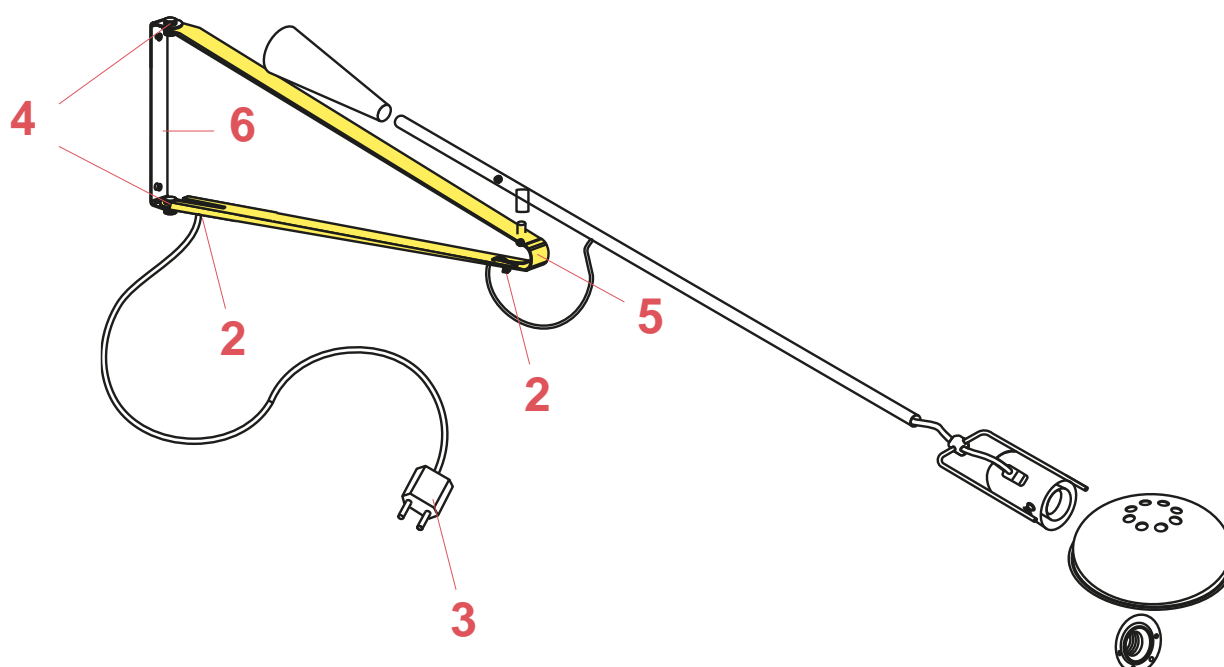


Fig.1

To assemble the triangle stem support (highlighted in yellow in the image), it is necessary:

Disconnect the wires in the plug (3) in a way to free the cable from the plug;

Remove the triangle support (5) from the wall attachment (6) by unfastening the upper and lower screws (4);

Unfasten the two cable clamps (2) screws and slide the electrical cable out from the cable clamps on the triangle support.

Replace the triangle support and re-assemble back all the components.