

TARAXACUM S2 COCOON
FU740209

EN

RF14216

ELECTRICAL WIRING ASSEMBLY



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com

Flos reserves the right to introduce any changes to its own models, without prior notice.

TARAXACUM S2 COCOON
FU740209

EN

RF14216

ELECTRICAL WIRING ASSEMBLY

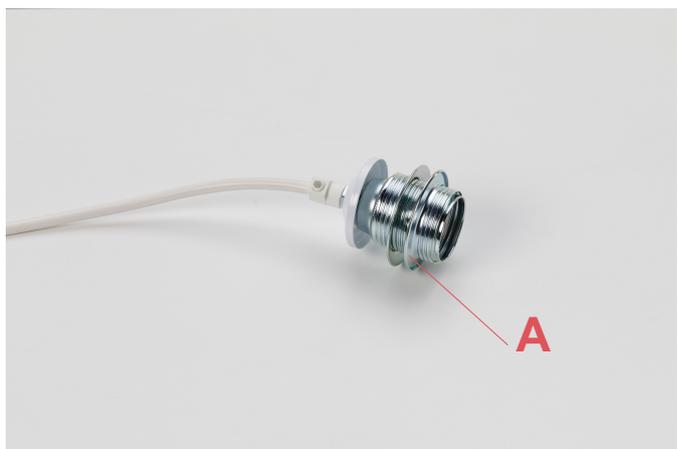


Fig.1



Fig.2

Separate the ring nut (A) from the lamp holder (B) unscrewing it.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

TARAXACUM S2 COCOON
FU740209

EN

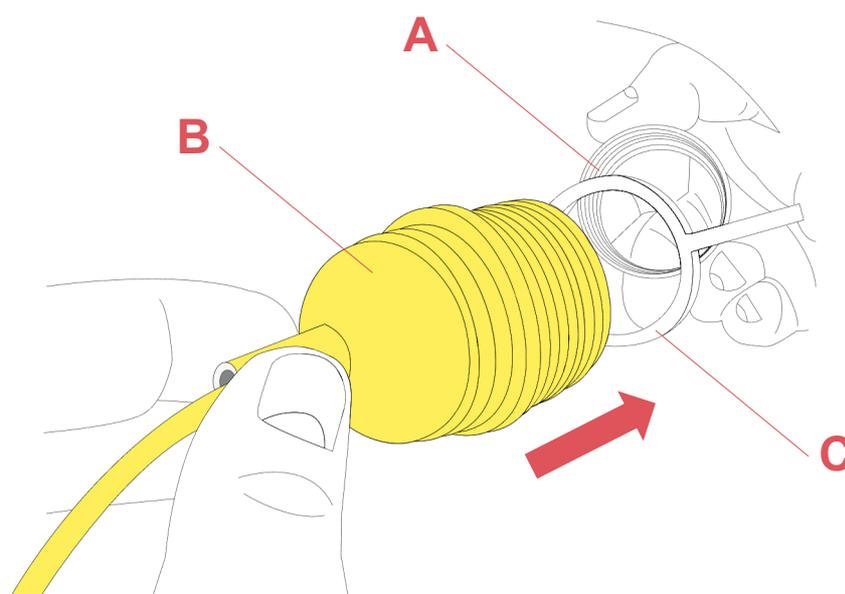
RF14216
ELECTRICAL WIRING ASSEMBLY

Fig.3

Insert the lamp holder (B) into the ring support (C) present in the Cocoon lamp structure and lock it by tightening the ring nut (C).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

TARAXACUM S2 COCOON
FU740209

EN

RF14216

ELECTRICAL WIRING ASSEMBLY

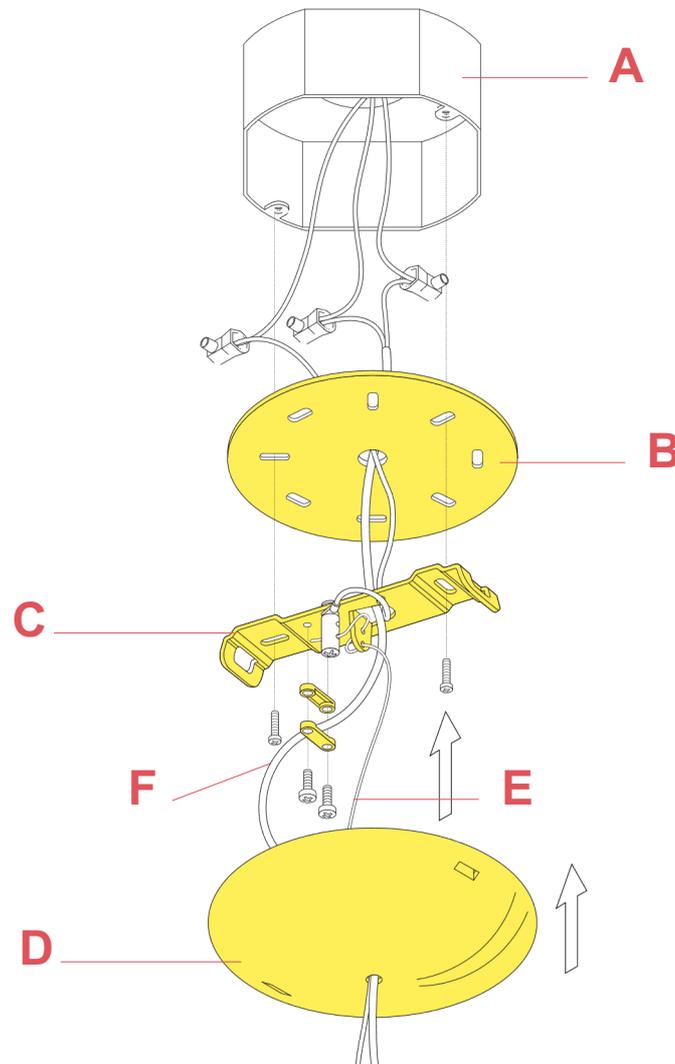


Fig.4

Insert the steel cable (E) through the two holes of the ceiling attachment stud, regulate the height of the steel suspension wire and fasten the locking screw. Cut off the excess wire.

Loosen screws of the cable clamp (F), regulate the height of the electrical cable and fasten back the screws of the cable clamp (F). Cut off the excess electrical cable and carry-out the electrical connection (Phase: black, Neutral: white, Earth: green; the white dashes of the wire indicates the neutral wire) in the junction box.

Ensure the correct installation of the mounting plate (B) and the ceiling attachment (C) to the junction box (A). Snap on the ceiling attachment, the ceiling rose (D).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

TARAXACUM S2 COCOON
FU740209

EN

RF14216

ELECTRICAL WIRING ASSEMBLY

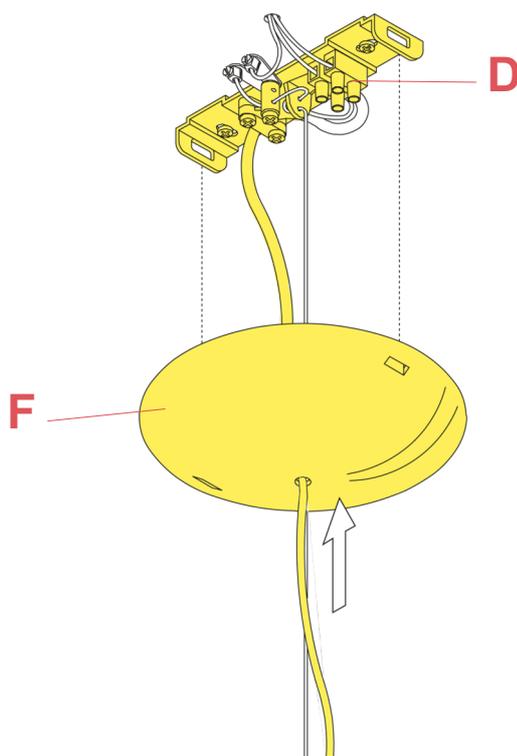


Fig.5

Connect the power cable to the terminal box (D) and connect the earth to its opposite terminal. Mount the ceiling-rose (F).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

TARAXACUM S2 COCOON
FU740209

EN

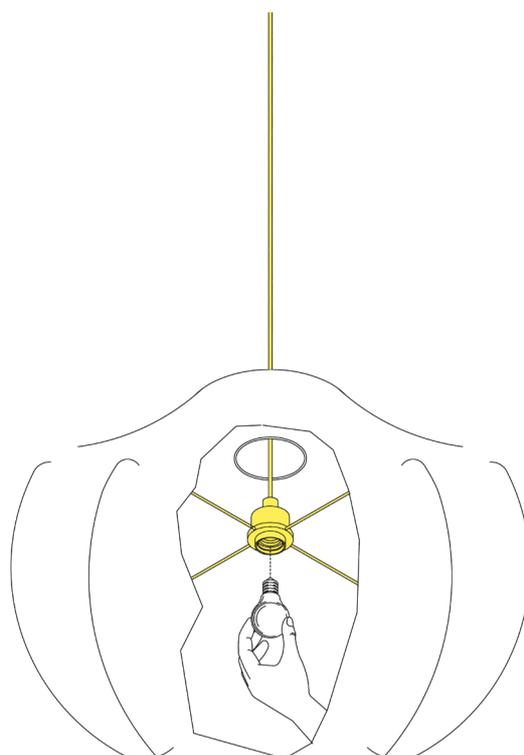
RF14216
ELECTRICAL WIRING ASSEMBLY

Fig.6

Insert the lamp bulb.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.