


AIM SMALL

Designed by R. & E. Bouroullec, 2014

F0095030

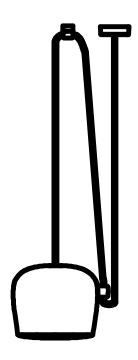





AIM SMALL

ΕN

F0095030

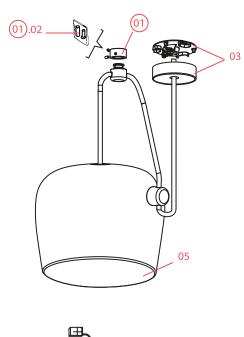

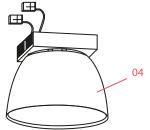

- 01. RF0090130 Black ceiling attachment assembly
- **02.** $RF06750 N^{\circ}$ 3 screws for black, dark grey/steel blue, ivy green, natural anodized versions
- 03. RF1555030 Black ceiling rose assembly
- **04. RF0095100** Sink/chip Led/Reflector assembly
- **05. RF0095500** Opal diffuser



ΕN

RF0090130

CEILING ATTACHMENT ASSEMBLY








Aim p.03

Aim Small p.03

RF0090130


CEILING ATTACHMENT ASSEMBLY

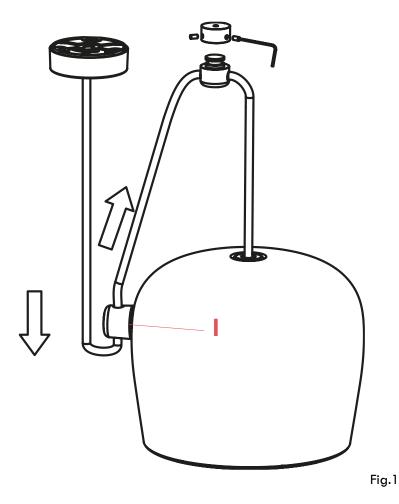

Free the electrical feed cable from the ceiling rose. Slide out the electrical feed cable from the cable gland (I).

RF0090130

CEILING ATTACHMENT ASSEMBLY

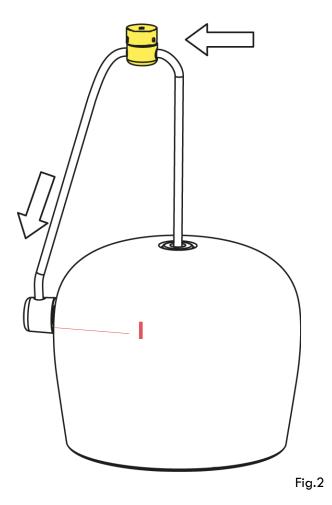

Insert the cable through the hole ceiling attachment (C) and through the cable gland hole (I).

ΕN

RF0090130

CEILING ATTACHMENT ASSEMBLY

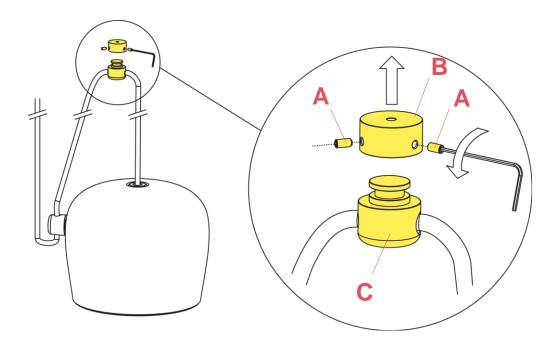


Fig.3

Unfasten the 3 screws (A) of the bearing ceiling attachment (B) by utilizing an Allen key and separate it from the cable gland (C).

ΕN

AIM SMALL F0095030

RF0090130

CEILING ATTACHMENT ASSEMBLY

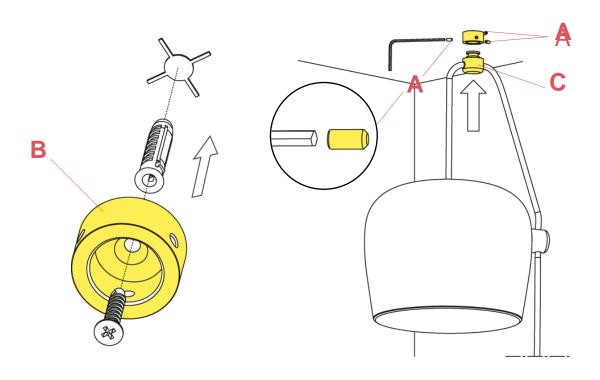


Fig.4

Fix the bearing ceiling attachment (B) to the desired point of the ceiling with screws and plugs.

NOTE: utilize screws and plugs suitable for the mounting surface.

Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).

Connect back the electrical cable to the terminal present in the ceiling rose respecting the wire polarities.



ΕN

RF06750

KIT OF QUANTITY 3 M4 SCREWS












Aim p.08 Aim Small p.08

AIM SMALL F0095030

RF06750

KIT OF QUANTITY 3 M4 SCREWS

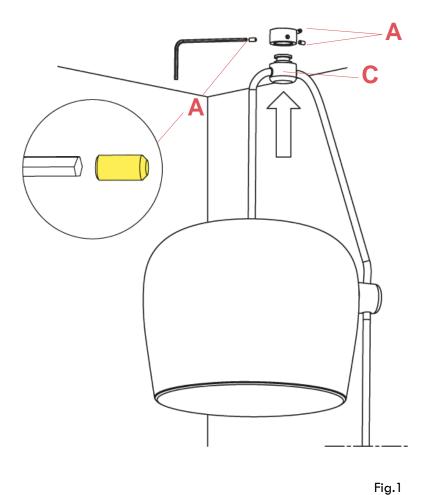

Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.

For the installation of the spare-part, it is necessary to consult a qualified electrician.



EN

RF1555030

CEILING ROSE ASSEMBLY





AIM SMALL F0095030

RF1555030

CEILING ROSE ASSEMBLY

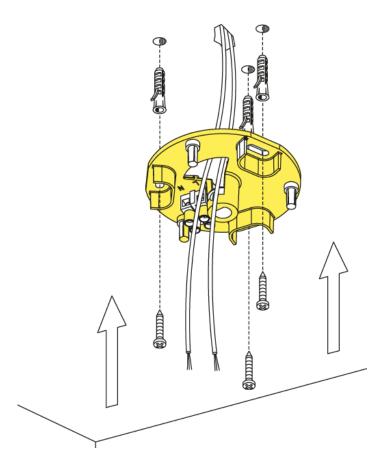


Fig.1

Install the wall fitting to the ceiling with screws and plugs, ensuring that the power wires pass through the central hole.

NOTE: Choose screw plugs that are suitable for the type of mounting surface.



AIM SMALL F0095030

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL





AIM SMALL F0095030

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

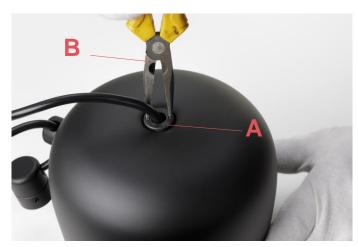


Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

AIM SMALL F0095030

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

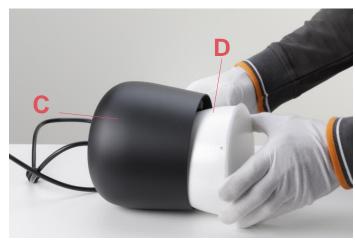


Fig.3

Lift-up the varnished body (C) from the internal body (D).

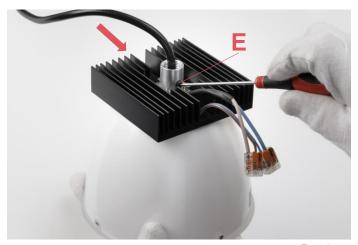


Fig.4

Unscrew the screw (E).

AIM SMALL F0095030

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.5

Disconnect the cables from the clamps (F).



Fig.6

Loosen the electrical cable from the sink.

AIM SMALL F0095030

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.7

Unscrew the 4 screws (G) from the white reflector.



Fig.8

Remove the diffuser.

AIM SMALL F0095030

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.9

Screw the 4 screws (G) to the white reflector.

NOTE!

Do not screw so fast!!!



Fig.10

Insert the electrical cable in the sink.

AIM SMALL F0095030

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.11

Connect the cables to the new clamps (H).

NOTE!

Respect the polarity of the cables.

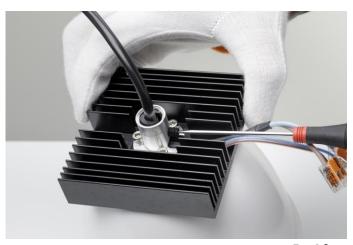


Fig.12

Screw the screw to fix the electrical cable.

AIM SMALL F0095030

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.13

Insert the new internal body (D) in the varnished body (C).



Fig.14

Re-assemble the Joint (A). Screw the joint (A) with a pair of pliers (B).(Fig.1 page 13)



RF0095500

AIM SMALL OPAL DIFFUSER



 $WARNING!\ When installing\ and\ whenever\ acting\ on\ the\ appliance,\ ensure\ that\ the\ power\ supply\ has\ been\ switched\ off.$ For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

AIM SMALL F0095030

RF0095500

AIM SMALL OPAL DIFFUSER

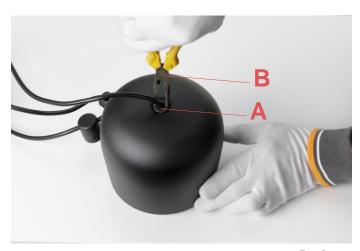


Fig.1

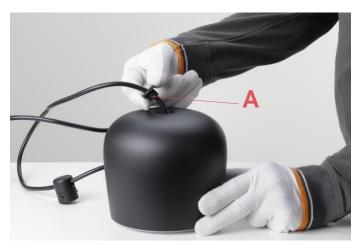


Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

AIM SMALL F0095030

RF0095500

AIM SMALL OPAL DIFFUSER



Fig.3

Lift-up the varnished body (C) from the internal body (D).



Fig.4

Unscrew the 3 screws (G) from the white reflector.

AIM SMALL F0095030

RF0095500

AIM SMALL OPAL DIFFUSER



Fig.5

Remove the diffuser.

NOTE!

Do not screw so fast!!!

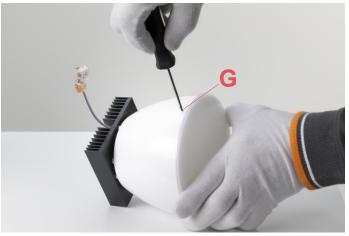


Fig.6

Insert the new internal body (D) in the varnished body (C).(Fig.3 page 22)

Re-assemble the Joint (A).(Fig.1 page 21)

Screw the joint (A) with a pair of pliers (B).(Fig.1 page 21)