
EN

RF32896

ASS.MONT.SWT.M95B EU M1,9-0,60P BCO

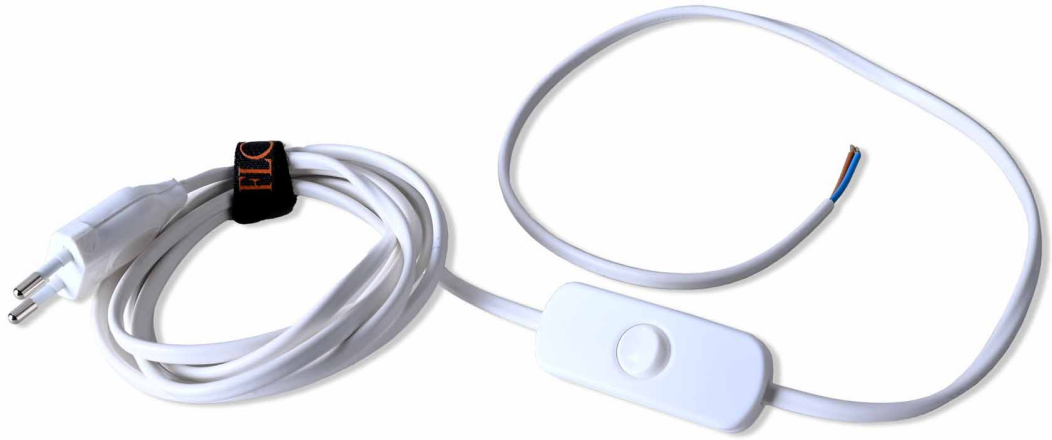

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

EN

RF32896

ASS.MONT.SWT.M95B EU M1,9-0,60P BCO



Fig.1

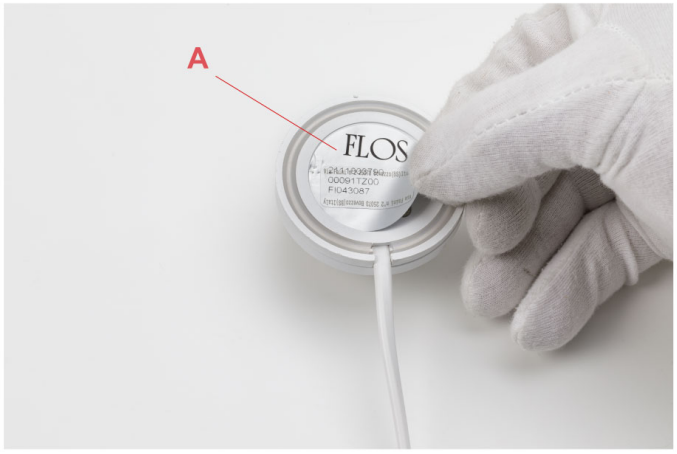


Fig.2

(Fig.1 Fig.2)
Turn upside down the lamp body and remove delicately without tearing the label (A) from the base (do not throw away).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

EN

RF32896

ASS.MONT.SWT.M95B EU M1,9-0,60P BCO

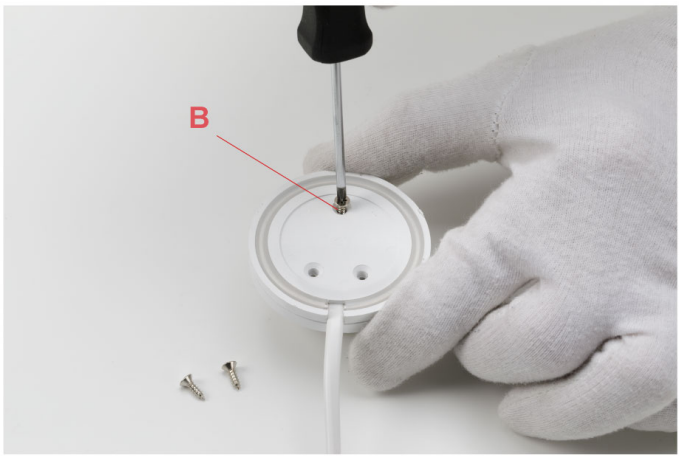


Fig.3

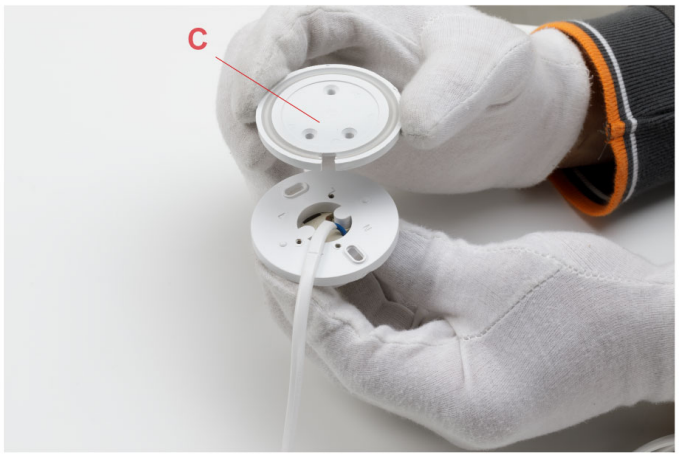


Fig.4

(Fig.3 Fig.4)
Unfasten the three screws (B) present on the base.
Remove the base (C) from the assembly.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

EN

RF32896

ASS.MONT.SWT.M95B EU M1,9-0,60P BCO

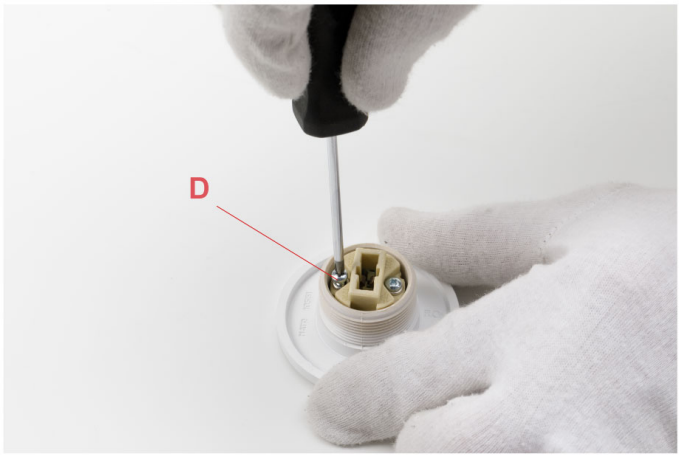


Fig.5



Fig.6

(Fig.5 Fig.6)
Turn the lamp body.
Unfasten the lamp holder fixing screws (D) and free the lamp holder (E) from the assembly.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

EN

RF32896

ASS.MONT.SWT.M95B EU M1,9-0,60P BCO

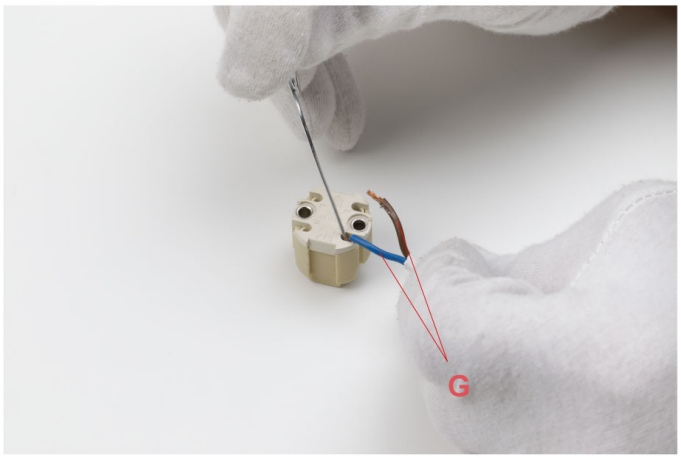


Fig.7

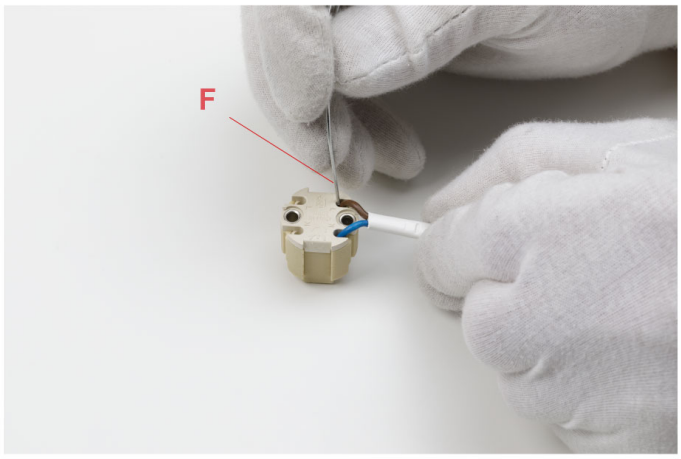


Fig.8

(Fig.7 Fig.8)
Disconnect the electrical wires (G) from the lamp holder by pressing the push terminals with a paper clip (F).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

EN

RF32896

ASS.MONT.SWT.M95B EU M1,9-0,60P BCO

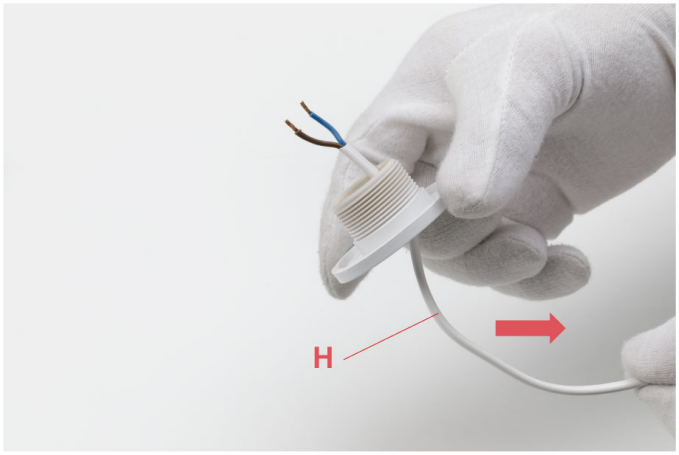


Fig.9

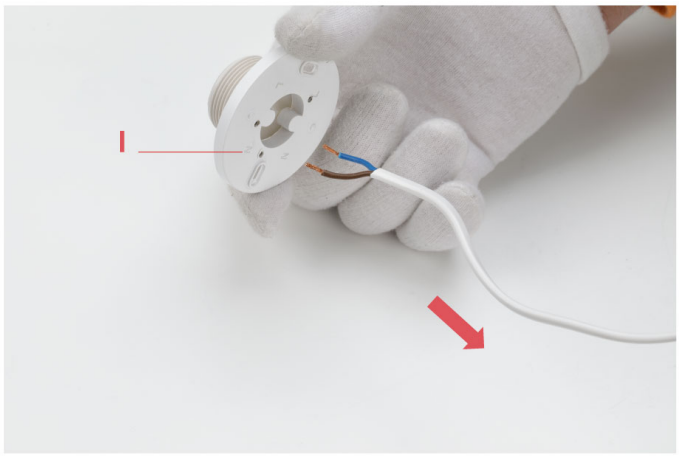


Fig.10

(Fig.9 Fig.10)
Slide-off the damaged electrical cable assembly (H) from the lamp body (I).
Assemble now the new spare-part:
Insert the electrical assembly (H) through the lamp body (I) hole.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

RF32896

ASS.MONT.SWT.M95B EU M1,9-0,60P BCO

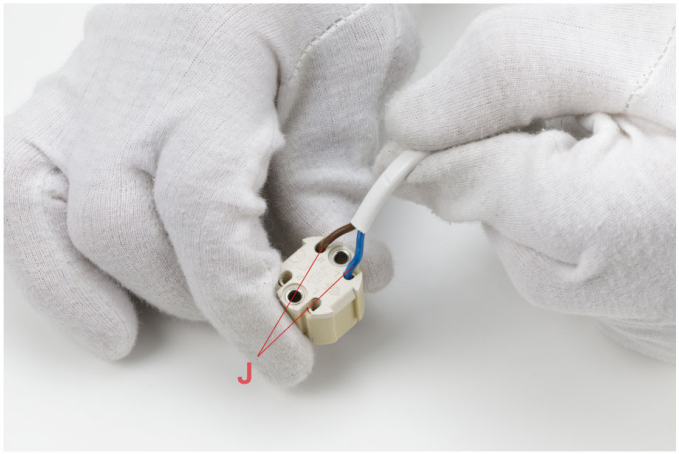


Fig.11

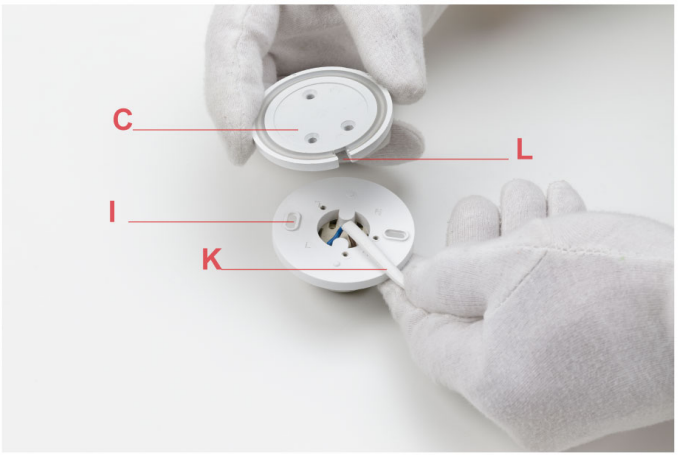


Fig.12

(Fig.11 Fig.12)
Connect the electrical wires (J) to the lamp holder terminals.
Connect the Brown “L” (live) wire in the terminal that corresponds to the letter “L” present on the lamp holder and then connect the Blue “N” (neutral) wire in the terminal “N”.
N.B The electrical wires are connected by pushing the wires inside the terminals, therefore it is necessary to verify that they are connected properly.
Turn the lamp body.
Lock the lamp holder (E) (Fig.6 page 8) to the lamp body by fastening the lamp holder fixing screws (D).(Fig.5 page 8).
Turn upside down the lamp body (I) and locate the base (C) on top.
N.B. The three holes present on the base (C) need to correspond with the three holes present on the lamp body (I).
The electrical cable (K) must come-out in correspondence of the lateral opening gap (L).
Glue the lamp label (A) (Fig.2 page 6) back-on the base.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.