

**F3451009**

Kelvin edge white base



---

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

**F3451009**

Kelvin edge white base

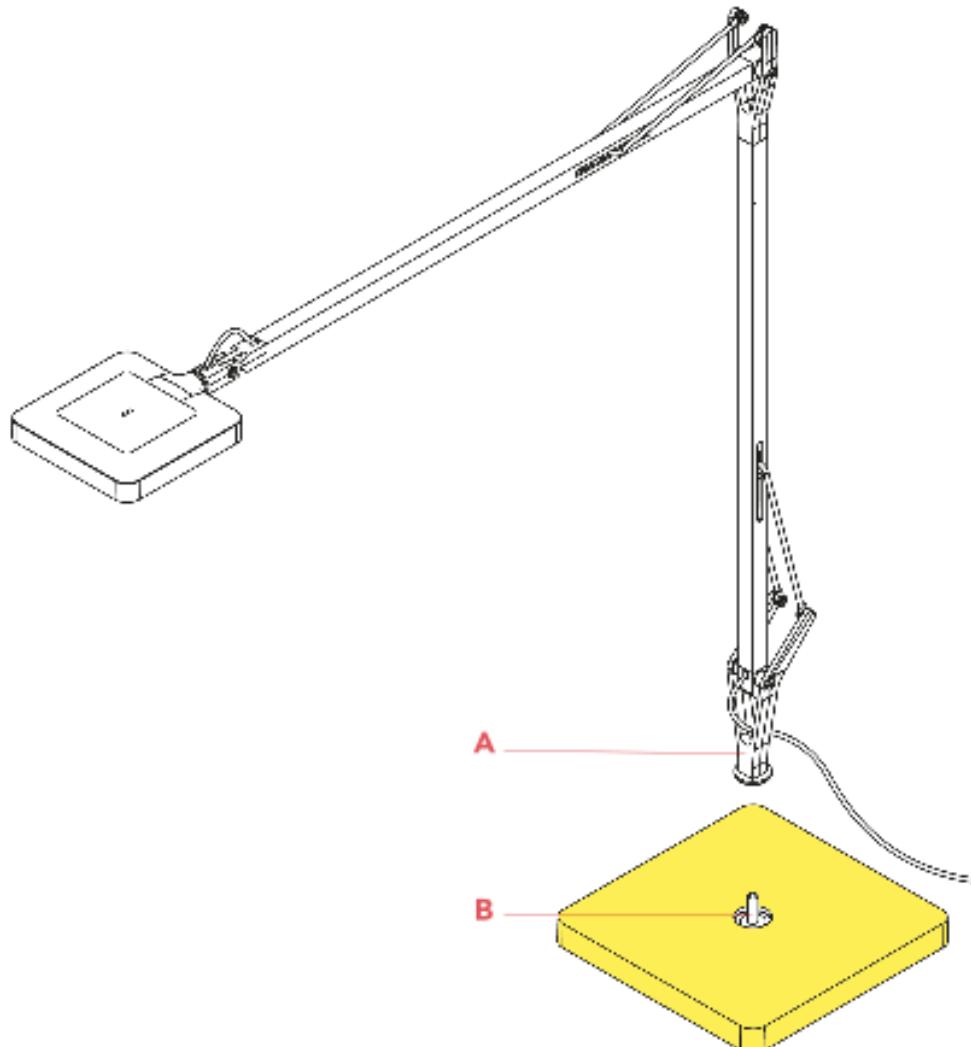


Fig.1

Insert the support (A) of the device into the pin (B) of the base.

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.