

**RF23023**

Ok Counterweight



---

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF23023

Ok Counterweight

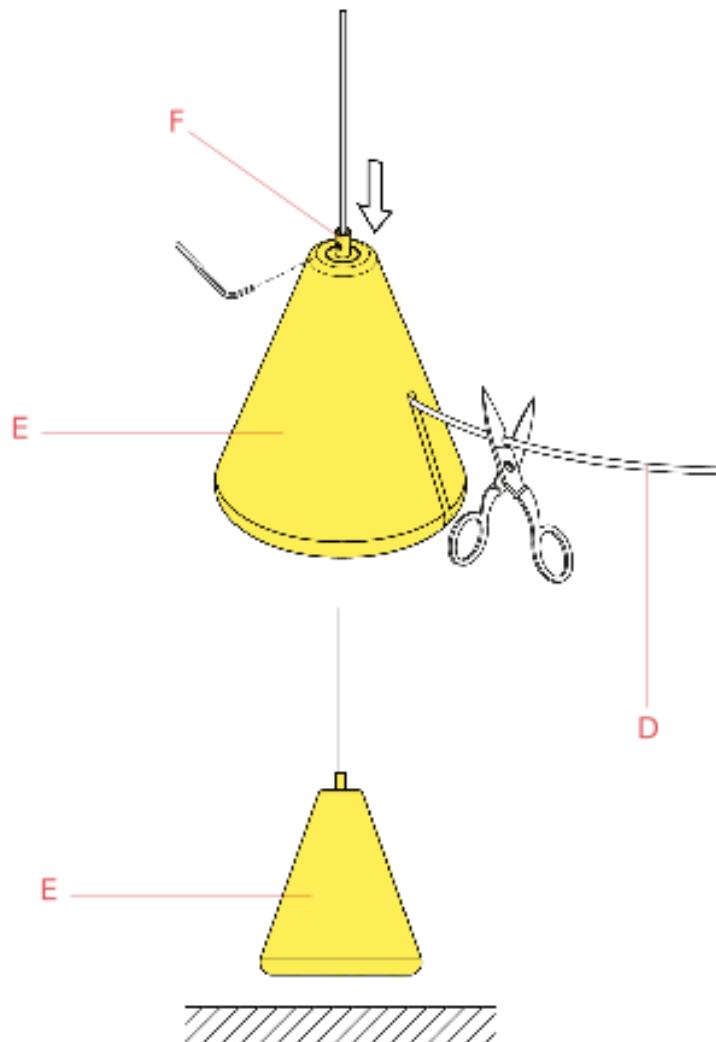


Fig.1

Pass the steel wire (D) through the counterweight (E) and run it through until the counterweight remains slightly suspended above the floor, then lock the wire by tightening the screw (F) and cut off the excess wire. **WARNING!** Lifting up the counterweight will cause mechanical tension loss of the suspension wire, causing the lamp fixture to fall down.

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.