

ΕN

## F1532030

Black marble base



ΕN

## F1532030

Black marble base

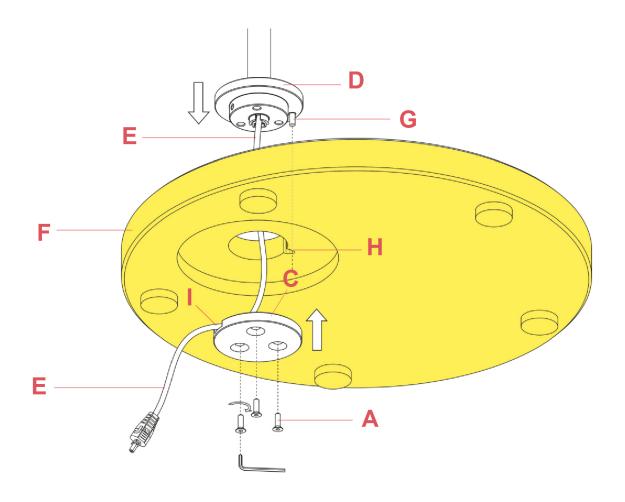


Fig.1

Insert the cable (E) into the hole of the base (F) and place the upper flange (D) inserting the plug into the slot (H). Fix the lower flange (C) through the screws (A) paying attention to insert the cable (E) into the split (I) which must be placed oppose the plug (G).