


# **AIM SMALL**

Designed by R. & E. Bouroullec, 2014

F0095009

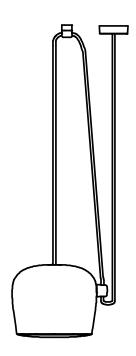




## **AIM SMALL**

ΕN

F0095009

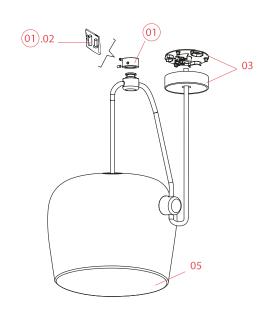



- 01. RF0090109 White ceiling attachment assembly
- **02.** RF06749  $N^{\circ}$  3 screws for white version
- 03. RF1555009 White ceiling rose assembly
- **04. RF0095100** Sink/chip Led/Reflector assembly
- **05. RF0095500** Opal diffuser

**AIM SMALL** F0095009

## RF0090109

CEILING ATTACHMENT ASSEMBLY








Aim p.03 Aim Small p.03

# RF0090109


**CEILING ATTACHMENT ASSEMBLY** 

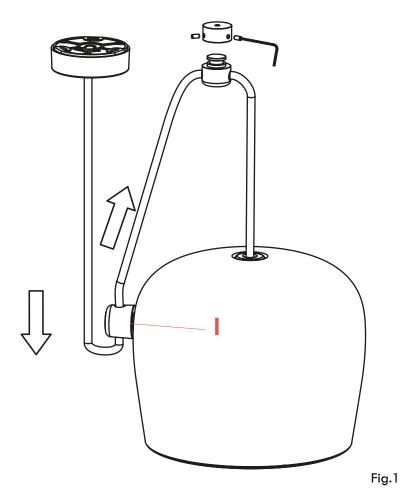

Free the electrical feed cable from the ceiling rose. Slide out the electrical feed cable from the cable gland (I).

#### RF0090109

**CEILING ATTACHMENT ASSEMBLY** 

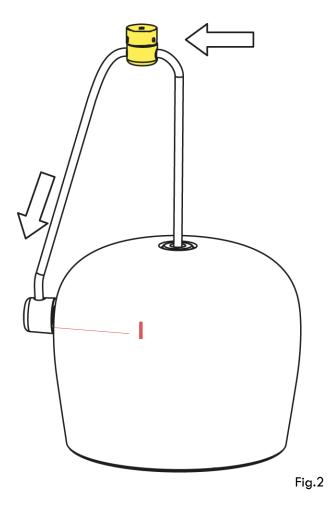

Insert the cable through the hole ceiling attachment (C) and through the cable gland hole (I).

EN

**AIM SMALL** F0095009

#### RF0090109

CEILING ATTACHMENT ASSEMBLY

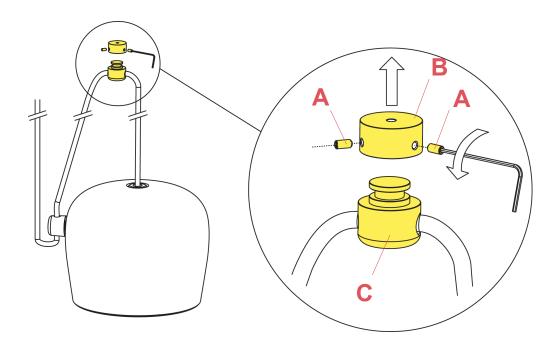


Fig.3

Unfasten the 3 screws (A) of the bearing ceiling attachment (B) by utilizing an Allen key and separate it from the cable gland (C).

Flos reserves the right to introduce any changes to its own models, without prior notice.

**AIM SMALL F0095009** 

#### RF0090109

**CEILING ATTACHMENT ASSEMBLY** 

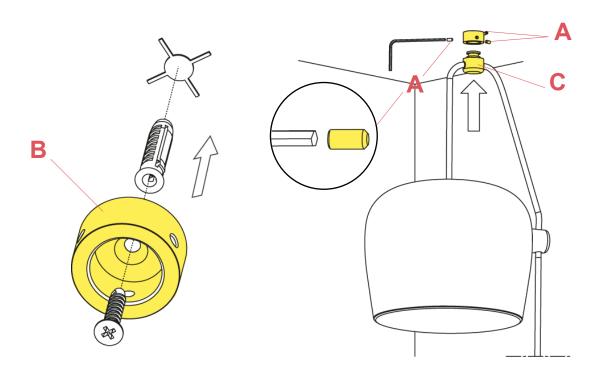


Fig.4

Fix the bearing ceiling attachment (B) to the desired point of the ceiling with screws and plugs.

NOTE: utilize screws and plugs suitable for the mounting surface.

Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).

Connect back the electrical cable to the terminal present in the ceiling rose respecting the wire polarities.



#### ΕN

#### RF06749

KIT OF QUANTITY 3 M4 SCREWS







Aim p.08 Aim Small p.08

**AIM SMALL** F0095009

#### RF06749

KIT OF QUANTITY 3 M4 SCREWS

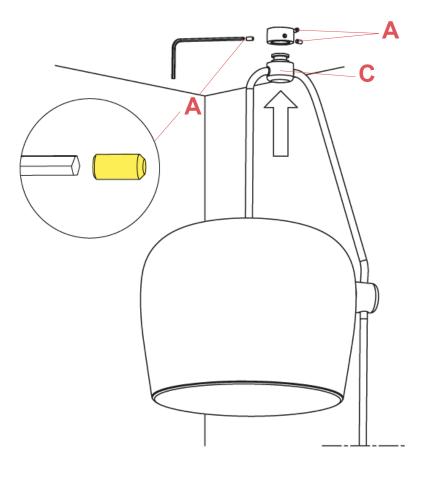


Fig.1

Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).



**AIM SMALL** F0095009

## RF1555009

CEILING ROSE ASSEMBLY





**AIM SMALL** F0095009

#### RF1555009

**CEILING ROSE ASSEMBLY** 

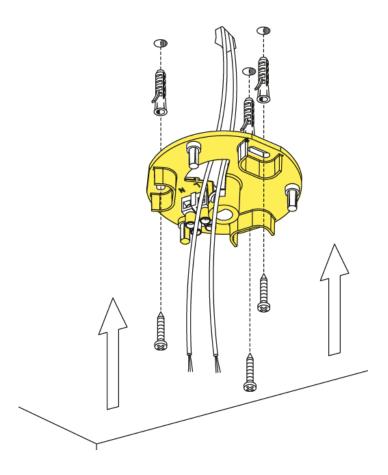


Fig.1

Install the wall fitting to the ceiling with screws and plugs, ensuring that the power wires pass through the central hole.

**NOTE:** Choose screw plugs that are suitable for the type of mounting surface.



SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL





 $WARNING!\ When installing\ and\ whenever\ acting\ on\ the\ appliance,\ ensure\ that\ the\ power\ supply\ has\ been\ switched\ off.$ For the installation of the spare-part, it is necessary to consult a qualified electrician.

Flos reserves the right to introduce any changes to its own models, without prior notice.

 $\hbox{@2021\,Flos}$  - All rights reserved - www.flos.com

ΕN

RF0095100

**AIM SMALL** F0095009

#### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

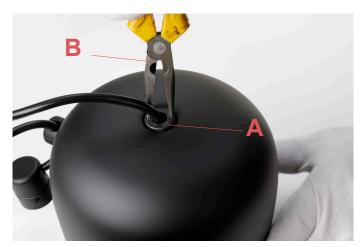


Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

**AIM SMALL** F0095009

#### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

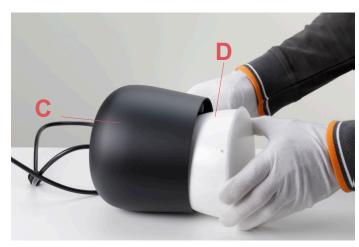


Fig.3

Lift-up the varnished body (C) from the internal body (D).

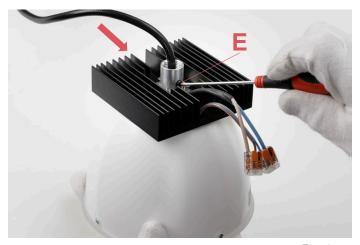


Fig.4

Unscrew the screw (E).

**AIM SMALL** F0095009

#### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.5

Disconnect the cables from the clamps (F).



Fig.6

Loosen the electrical cable from the sink.

**AIM SMALL** F0095009

#### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.7

Unscrew the 4 screws (G) from the white reflector.



Fig.8

Remove the diffuser.

**AIM SMALL** F0095009

#### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.9

Screw the 4 screws (G) to the white reflector.

#### NOTE!

Do not screw so fast!!!



Fig.10

Insert the electrical cable in the sink.

**AIM SMALL** F0095009

#### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

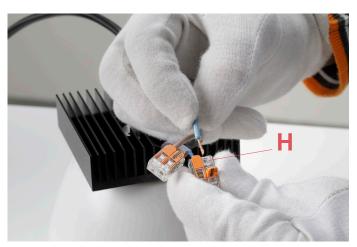


Fig.11

Fig.12

Connect the cables to the new clamps (H).

#### NOTE!

Respect the polarity of the cables.

Screw the screw to fix the electrical cable.

**AIM SMALL F0095009** 

#### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.13

Insert the new internal body (D) in the varnished body (C).



Fig.14

Re-assemble the Joint (A). Screw the joint (A) with a pair of pliers (B).(Fig.1 page 13)



## RF0095500

AIM SMALL OPAL DIFFUSER





 $WARNING!\ When installing\ and\ whenever\ acting\ on\ the\ appliance,\ ensure\ that\ the\ power\ supply\ has\ been\ switched\ off.$ For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

**AIM SMALL F0095009** 

# RF0095500

AIM SMALL OPAL DIFFUSER

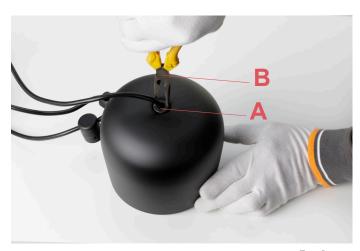


Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

**AIM SMALL F0095009** 

# RF0095500

AIM SMALL OPAL DIFFUSER



Fig.3

Lift-up the varnished body (C) from the internal body (D).



Fig.4

Unscrew the 3 screws (G) from the white reflector.

**AIM SMALL F0095009** 

#### RF0095500

AIM SMALL OPAL DIFFUSER



Fig.5

Remove the diffuser. **NOTE!** 

Do not screw so fast!!!



Fig.6

Insert the new internal body (D) in the varnished body (C).(Fig.3 page 22)

Re-assemble the Joint (A).(Fig.1 page 21)

Screw the joint (A) with a pair of pliers (B).(Fig.1 page 21)