


## RF0410500

Power supply kit for Arrangements small & Noctambule

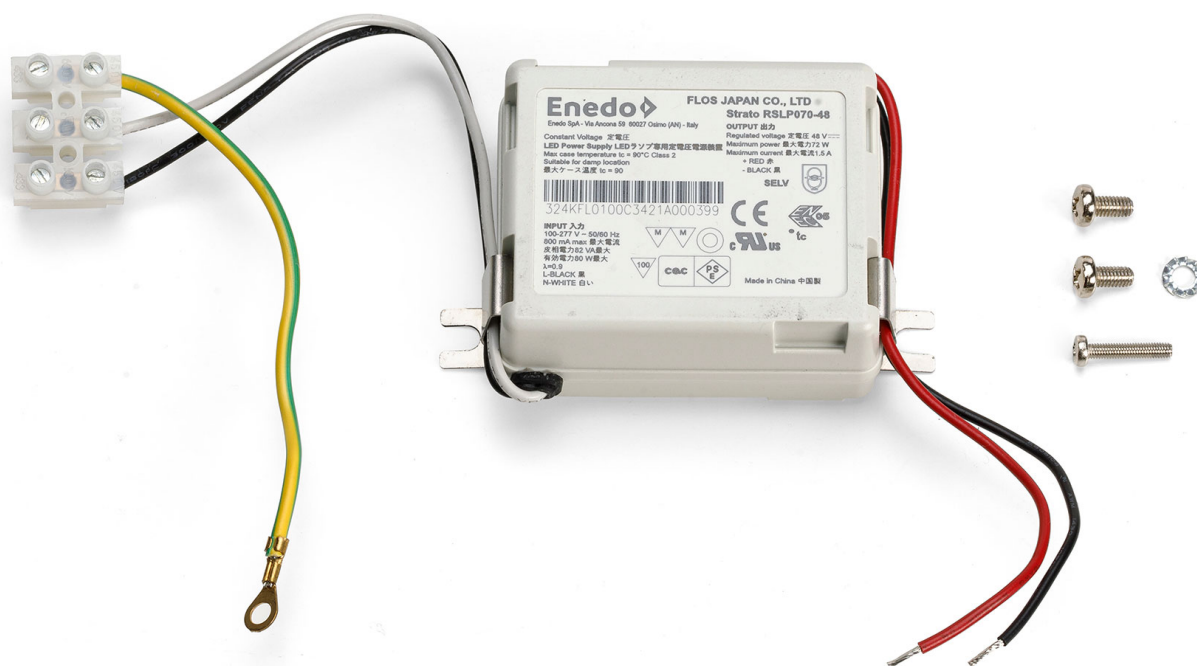

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0410500

Power supply kit for Arrangements small & Noctambule



Fig.1



Fig.2



Fig.3

Remove the cover.  
Disconnect the Vin and Vout terminals from the dimmer using a screwdriver.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

## RF0410500

Power supply kit for Arrangements small & Noctambule

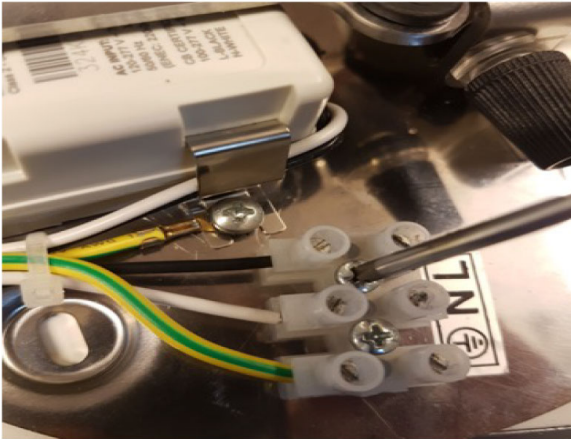


Fig.3



Fig.4

- Unscrew the screws (A & B) from the old Power Supply using a screwdriver.
- Remove the old Power Supply.
- Replace the old Power Supply with the new one.
- Now Connect the Vin and Vout terminals to the dimmer using a screwdriver.(Fig.2 page 4)
- Fasten back the screws (A & B) of the new Power Supply using a screwdriver.
- Place the cover on the ceiling rose. (Fig.1 page 4)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0410500

Power supply kit for Arrangements small & Noctambule



Fig.1



Fig.2



Fig.3

Remove the cover.  
Unplug the wire from the cover.  
Unscrew the N°3 screws from the black support using an allen key.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

## RF0410500

Power supply kit for Arrangements small & Noctambule



Fig.4

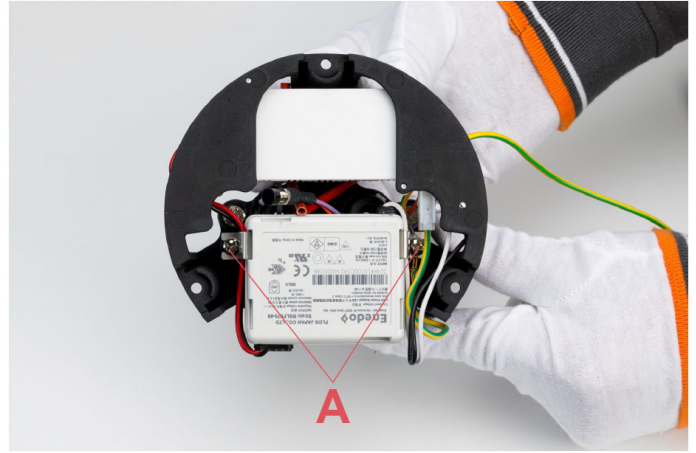


Fig.5

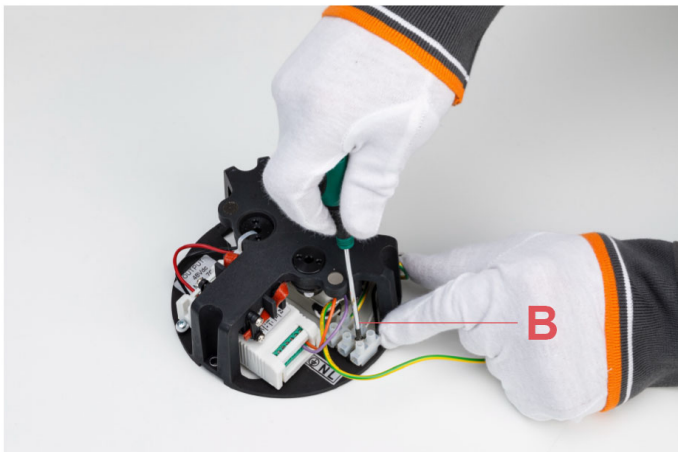


Fig.6

Remove the black support from the ceiling attach.(Fig.4)

Unscrew the screws (A & B) from the old

Power Supply using a screwdriver and remove the old power supply.(Fig.5-6)

Assemble now the new spare parts.

Position the new power supply and fasten back the screws (A & B). (Fig.5-6)

Position the black support on the ceiling attached and fasten back the n°3 screws using an allen key (Fig.4)

Connect the wire to the cover (Fig.2) and place the cover on the ceiling rose. (Fig.1)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0410500

Power supply kit for Arrangements small & Noctambule



Fig.1



Fig.2

Remove the cover.  
Unplug the wire from the cover.  
Unscrew the N°3 screws from the black support using an allen key.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.



## RF0410500

Power supply kit for Arrangements small & Noctambule



Fig.3

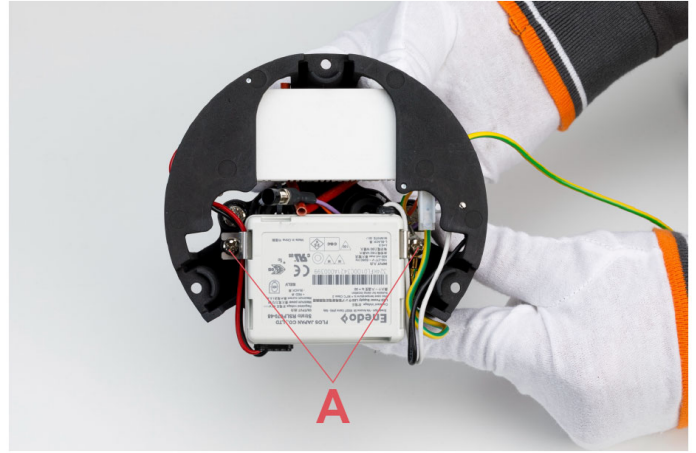


Fig.4

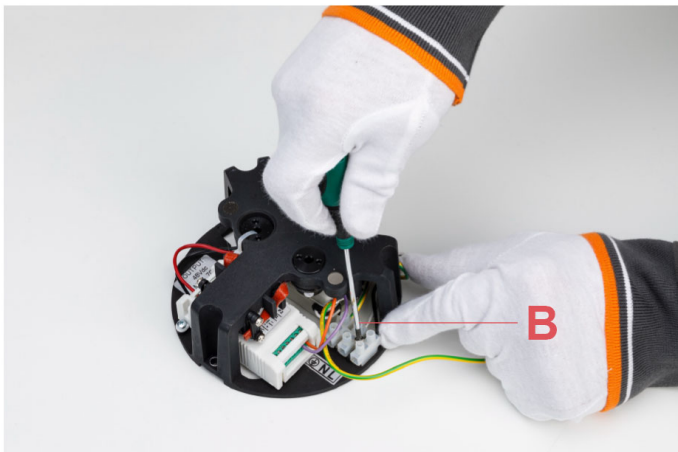


Fig.5

Remove the black support from the ceiling attach.(Fig.4)

Unscrew the screws (A & B) from the old

Power Supply using a screwdriver and remove the old power supply.(Fig.5-6)

Assemble now the new spare parts.

Position the new power supply and fasten back the screws (A & B). (Fig.5-6)

Position the black support on the ceiling attached and fasten back the n°3 screws using an allen key (Fig.4)

Connect the wire to the cover (Fig.2) and place the cover on the ceiling rose. (Fig.1)

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.