


RF9523134

Wireline Assembly Rose Cover Pink

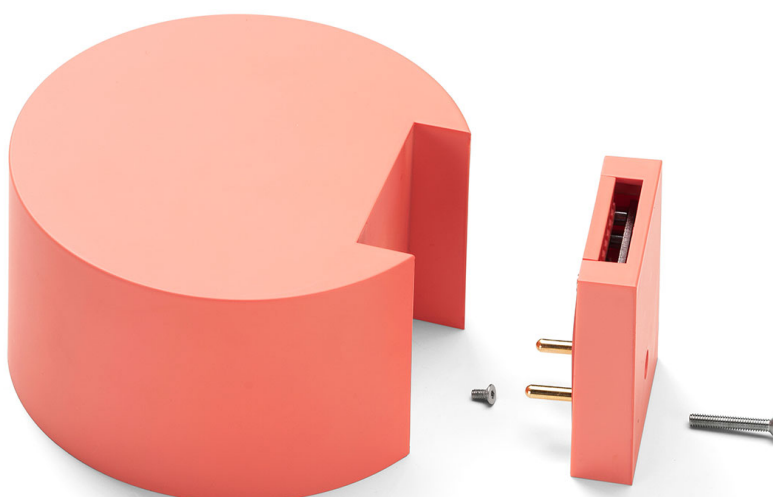

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF9523134

Wireline Assembly Rose Cover Pink



Fig.1



Fig.2

Unfasten the screw (A) using the allen key and disassemble the ceiling rose.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

RF9523134

Wireline Assembly Rose Cover Pink



Fig.3



Fig.4

Unfasten the screw (B) using the allen key and lift the cover.
Assemble now the new spare-part.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.