

**F650000** Splügen Bräu**EN****RF6500109**

Splügen Brau Complete ceiling rose



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

F650000 Splügen Bräu

EN

# RF6500109

Splügen Brau Complete ceiling rose

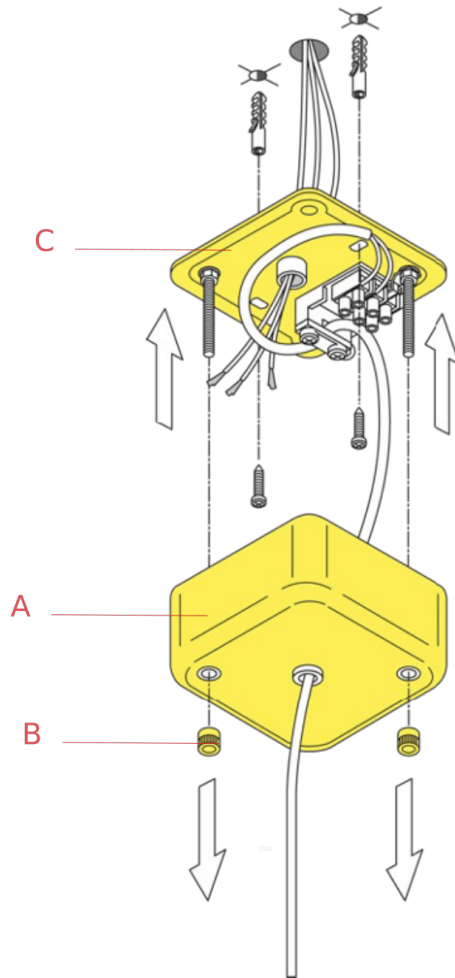


Fig.1

Open the washer (A) by unscrewing the pawls (B). Fasten the wall bracket (C) using the stud bolts. NOTE : Choose screw anchors that are suitable for the surface which shall be assembled upon.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.