

RF81836

Ceiling attachment assembly



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

RF81836

Ceiling attachment assembly

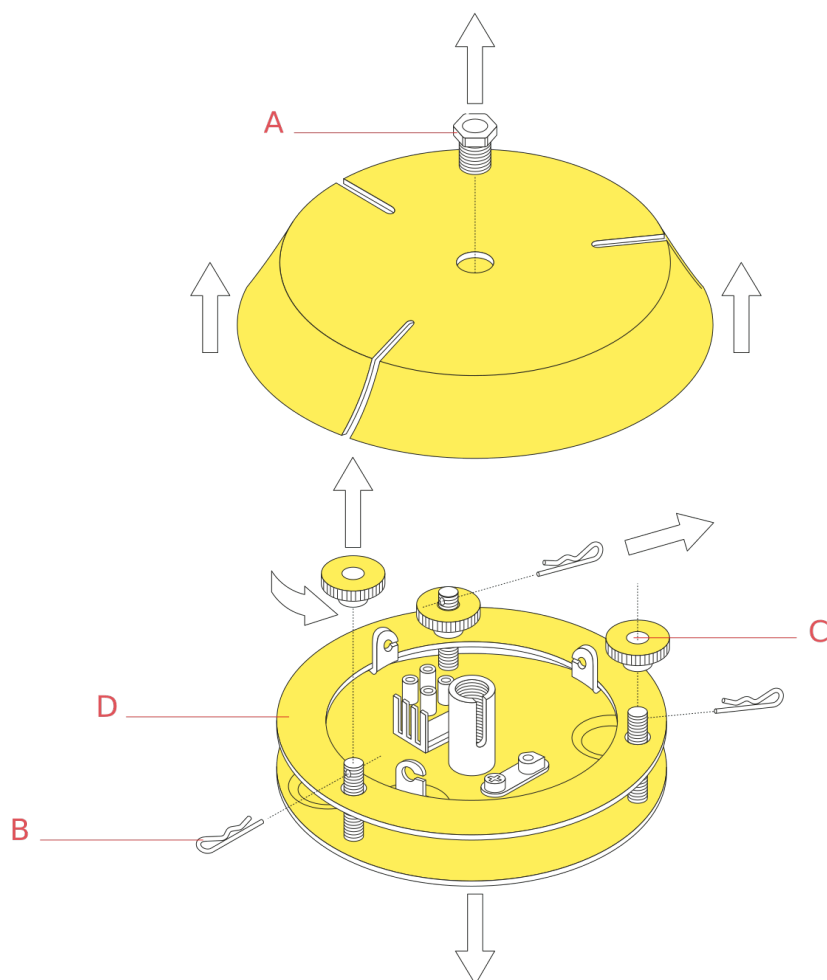


Fig.1

Disassemble the cable stopper (A), remove the safety split pins (B), unscrew the knurled nuts (C) and adjustment ring (D).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF81836

Ceiling attachment assembly

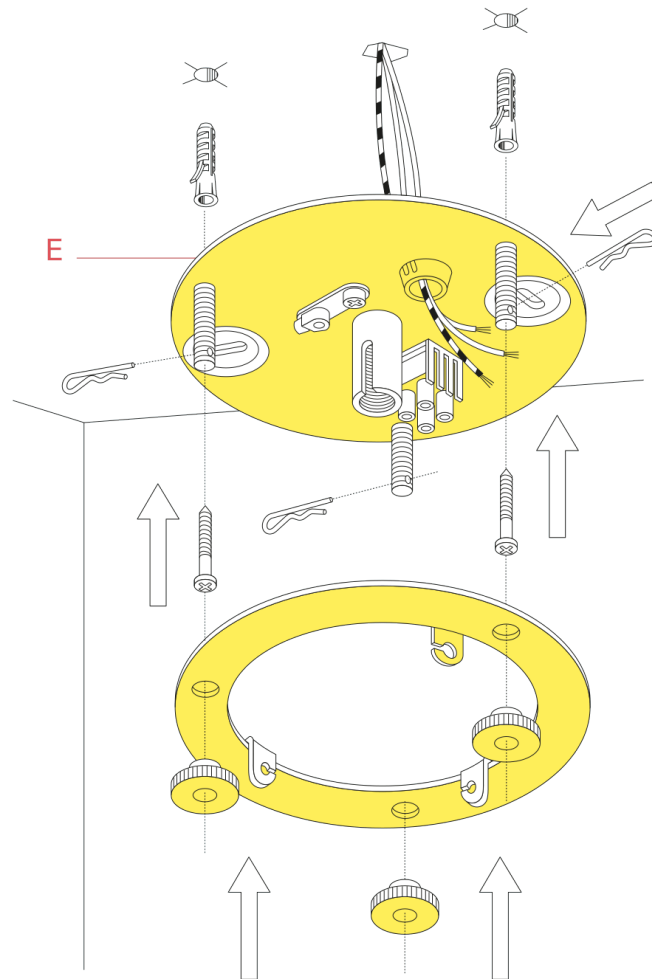


Fig.2

Fix the wall attachment (E) utilizing appropriate expansion bolts.

REMARKS! Select and utilize screw plugs which are suitable for the surface where the assembly is to be installed.

Assemble the adjustment balance ring by tightening the milled bolts and insert the safety cotter pins.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.