


AIM

Designed by R. & E. Bouroullec, 2013


F0090009




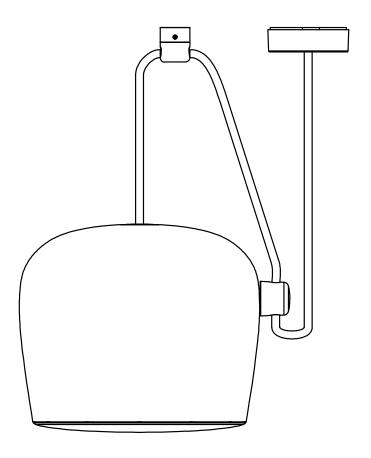

AIM F0090009

ΕN

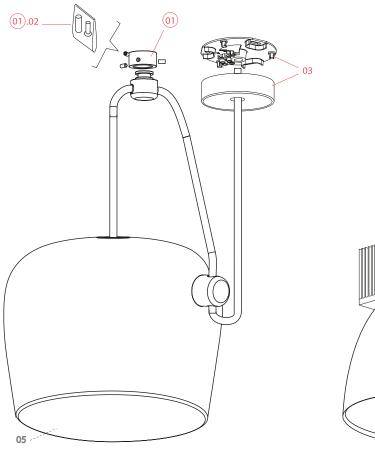

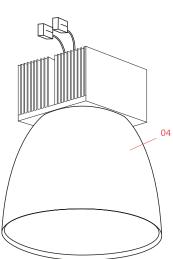

- $\textbf{01. RF0090109} \ \ \text{White ceiling attachment assembly}$
- **02.** RF06749 N° 3 screws for white version
- **03. RF0090209** White ceiling rose assembly
- **04. RF0090300** Sink/chip Led/Reflector assembly
- **05. RF0090600** Opal diffuser



AIM F0090009

RF0090109

CEILING ATTACHMENT ASSEMBLY







Aim p.03 Aim Small p.03

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.


EN



AIM F0090009

RF0090109

CEILING ATTACHMENT ASSEMBLY

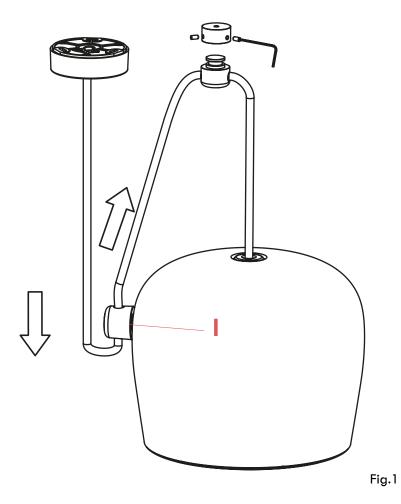

Free the electrical feed cable from the ceiling rose. Slide out the electrical feed cable from the cable gland (I).

EN



AIM F0090009

RF0090109

CEILING ATTACHMENT ASSEMBLY

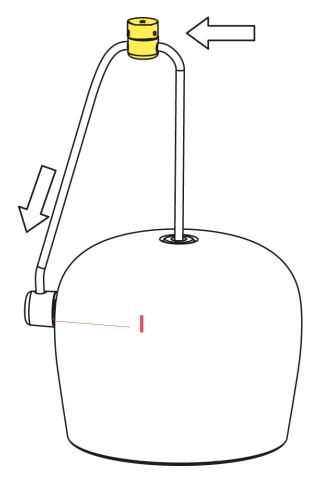


Fig.2

Insert the cable through the hole ceiling attachment (C) and through the cable gland hole (I).



AIM F0090009

RF0090109

CEILING ATTACHMENT ASSEMBLY

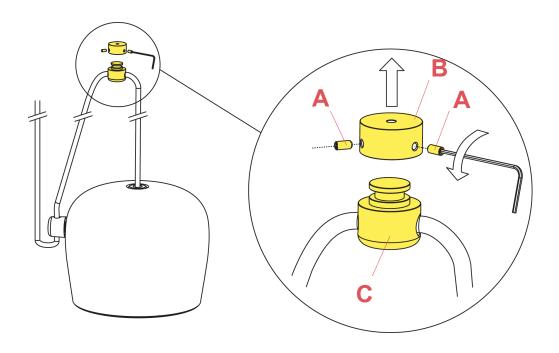


Fig.3

Unfasten the 3 screws (A) of the bearing ceiling attachment (B) by utilizing an Allen key and separate it from the cable gland (C).



AIM F0090009

RF0090109

CEILING ATTACHMENT ASSEMBLY

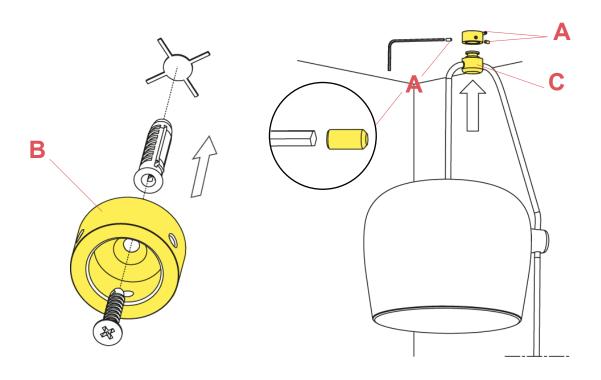


Fig.4

Fix the bearing ceiling attachment (B) to the desired point of the ceiling with screws and plugs.

NOTE: utilize screws and plugs suitable for the mounting surface.

Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).

Connect back the electrical cable to the terminal present in the ceiling rose respecting the wire polarities.



AIM F0090009

RF06749

KIT OF QUANTITY 3 M4 SCREWS







Aim p.08 Aim Small p.08

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.



AIM F0090009

RF06749

KIT OF QUANTITY 3 M4 SCREWS

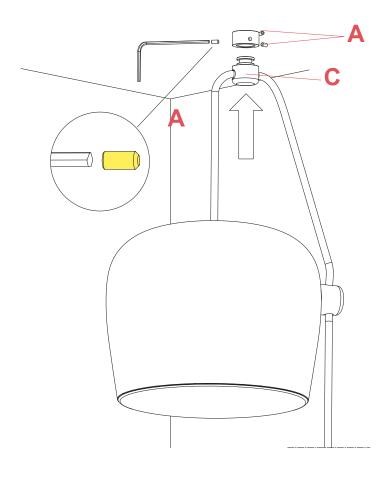


Fig.1

Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).



AIM F0090009

RF0090209

WHITE CEILING ROSE ASSEMBLY







AIM F0090009

RF0090209

CEILING ROSE ASSEMBLY

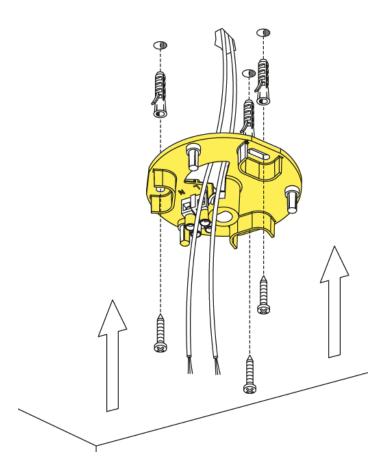


Fig.1

Install the wall fitting to the ceiling with screws and plugs, ensuring that the power wires pass through the central hole.

NOTE: Choose screw plugs that are suitable for the type of mounting surface.



AIM F0090009

RF0090300

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM






WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.



AIM F0090009

RF0090300

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM

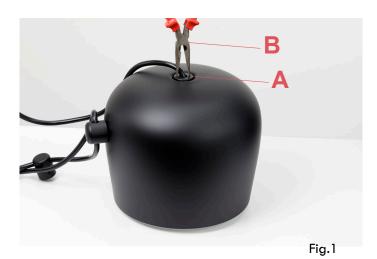

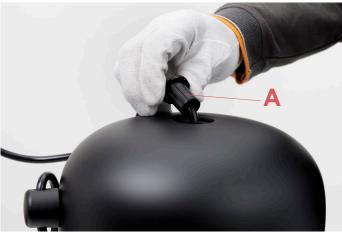


Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).



AIM F0090009

RF0090300

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM



Fig.3

Lift-up the varnished body (C) from the internal body (D).



Fig.4

Unscrew the screw (E).



AIM F0090009

RF0090300

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM

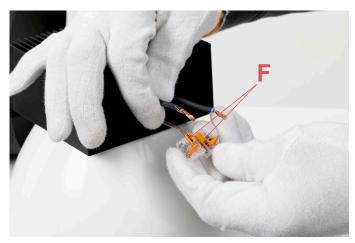


Fig.5

Disconnect the cables from the clamps (F).



Fig.6

Loosen the electrical cable from the sink.



AIM F0090009

RF0090300

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM



Fig.7

Unscrew the 4 screws (G) from the white reflector



Fig.8

Remove the diffuser.



AIM F0090009

RF0090300

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM

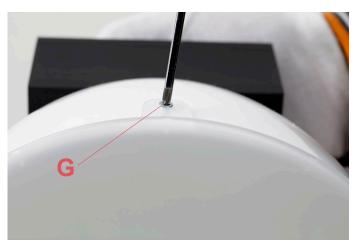


Fig.9

Screw the 4 screws (G) to the white reflector.

NOTE!

Do not screw so fast!!!

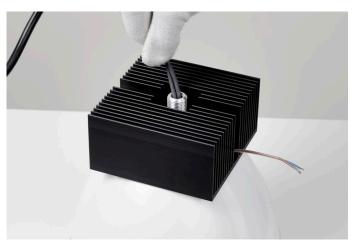


Fig.10

Insert the electrical cable in the sink.



AIM F0090009

RF0090300

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM



Fig.11



Fig.12

Connect the cables to the new clamps (H).

NOTE!

Respect the polarity of the cables.

Screw the screw to fix the electrical cable.



AIM F0090009

RF0090300

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM



Fig.13

Insert the new internal body (D) in the varnished body (C).



Fig.14

Re-assemble the Joint (A). Screw the joint (A) with a pair of pliers (B).(Fig.1 page 13)



AIM F0090009

RF0090600

AIM OPAL DIFFUSER





AIM F0090009

RF0090600

AIM OPAL DIFFUSER

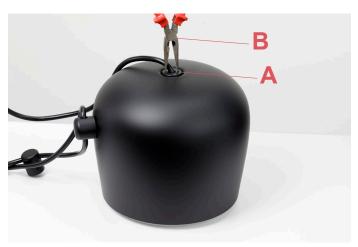


Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).



AIM F0090009

RF0090600

AIM OPAL DIFFUSER



Fig.3

Lift-up the varnished body (C) from the internal body (D).

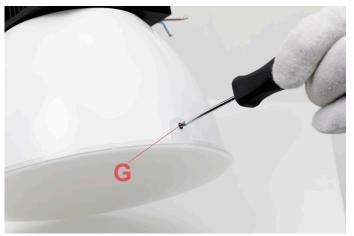


Fig.4

Unscrew the 3 screws (G) from the white reflector.



AIM F0090009

RF0090600

AIM OPAL DIFFUSER



Fig.5

Remove the diffuser. **NOTE!**

Do not screw so fast!!!

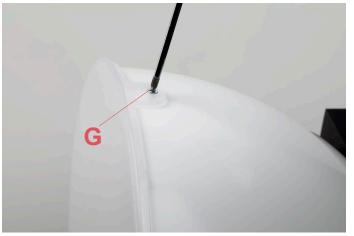


Fig.6

Insert the new internal body (D) in the varnished body (C).(Fig.3 page 22)

Re-assemble the Joint (A).(Fig.1 page 21)

Screw the joint (A) with a pair of pliers (B).(Fig.1 page 21)