
# FLOS


### **GLO-BALL F1**

Designed by Jasper Morrison, 1998

F3031031



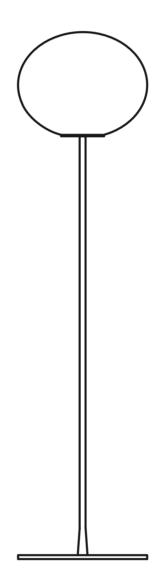

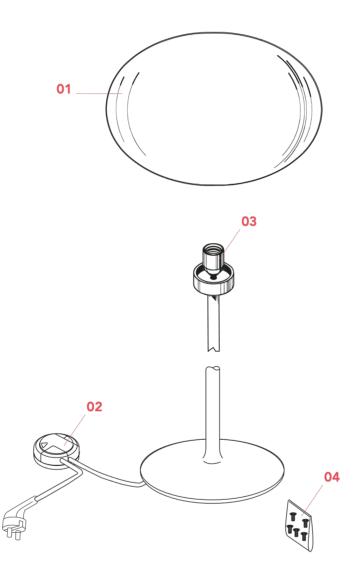


- 01. F3050031 White/black diffuser
- 02. RF28045 Led 220/240V rondò dimmer
- 03. RF2500200 Lamp holder assembly
- 04. RF3020100 Kit of 5 white feed pads for base

GLO-BALL F1 F3031031

EN

### F3050031 WHITE/BLACK DIFFUSER 1


Ø46mm

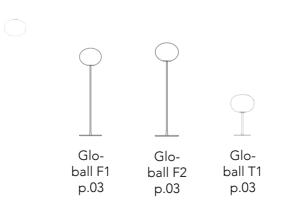

### GLO-BALL F1 F3031031

F3050031

WHITE/BLACK DIFFUSER 1

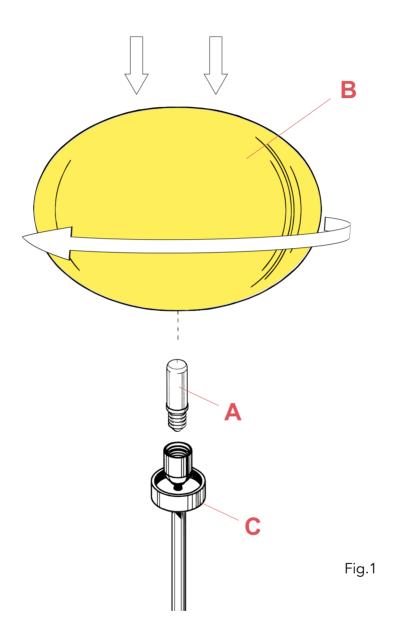

Insert the bulb (A). Position the diffuser (B) on the support (C) and secure it, turning it clockwise.


EΝ

#### GLO-BALL F1 F3031031

### RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



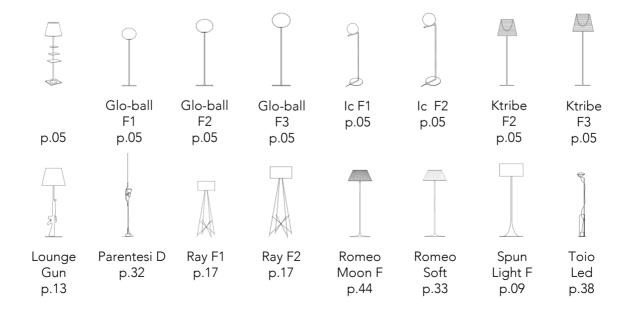

GLO-BALL F1 F3031031

### RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.1

Open the box of the damaged dimmer.

For the opening, it is necessary to remove the rubber pad from underneath the dimmer box.



Fig.2

Unfasten the screw that locks the triangle terminal cover.

### GLO-BALL F1 F3031031

### **RF28045**

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.3

Fig.4

Turn the dimmer box and remove the terminal cover.

Unfasten the three screws of the cable clamps.

GLO-BALL F1 F3031031

EΝ

### RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.5



Fig.6

Remove the cable clamp and disconnect the cables from the green terminal box.

Assemble now the new dimmer:

Connect the cables respecting the polarities, lock the wires by positioning the cable clamp and then fasten the three screws, cover the green terminal box with the triangle cover, turn the dimmer box, fasten the screw and stick-on the rubber pads.


EN

GLO-BALL F1 F3031031

RF2500200

LAMP HOLDER ASSEMBLY



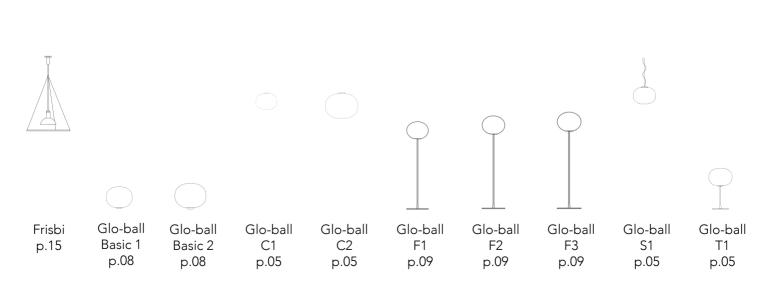

### GLO-BALL F1 F3031031

RF2500200

LAMP HOLDER ASSEMBLY

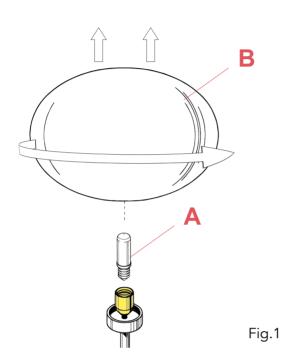




Fig.2

Remove the diffuser (B) and the lamp-bulb (A).

Lay the lamp body down on a clean towel. Remove the cable clamps (C) by unfastening there apposite screws.

#### GLO-BALL F1 F3031031

RF2500200 LAMP HOLDER ASSEMBLY



Fig.3



Fig.4

Remove the lamp holder.

Insert a flat headed screw driver inside the opening of the lateral clamp and unhook the lamp holder (D) from the support. Repeat the same operation also for the opposite side.

Remove the lamp holder from its support and disconnect the electrical wires by pressing the push terminals with a paper clip (E) or something similar. Cut-off the cable tie (F).

#### GLO-BALL F1 F3031031

RF2500200 LAMP HOLDER ASSEMBLY



Fig.5



Fig.6

Remove the cable isolator (G) from the electrical cable.

Unfasten the locking screw (H) by utilizing a tiny flat headed screw driver.

#### GLO-BALL F1 F3031031

RF2500200 LAMP HOLDER ASSEMBLY



Fig.7



Fig.8

Remove the lamp holder support (I) by unfastening it from the assembly.

Assemble now the new spare-part:

Tighten the lamp holder support (I) onto the assembly and then fasten the locking screw (H) (Fig.6 page 10) by utilizing a flat headed screw driver.

Insert the isolator (F) (Fig.4 page 11).

#### GLO-BALL F1 F3031031

RF2500200



Fig.9

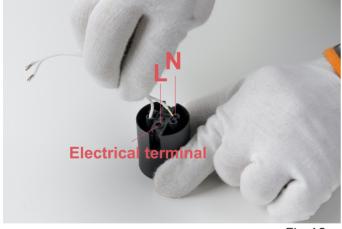


Fig.10

Connect the electrical wires to the lamp holder by utilizing always the paper clip. Connect the Brown "L" (live) wire in the terminal that corresponds (opposite side) to the centre brass contact of the lamp holder and then connect the Blue "N" (neutral) wire in the other terminal.

N.B. The electrical wires are connected by pushing the wires inside the terminals, therefore it is necessary to verify that they are connected properly.

Now reassembly the lamp:

Hook the lamp holder (D) (Fig.3 page 11) on the support (I).(Fig.7 page 13)

Position the electrical cable between the threaded holes and fix the cable clamps (C) by fastening the screws.(Fig.2 page 10)


EN

### GLO-BALL F1 F3031031

RF3020100

KIT OF 5 WHITE FEED PADS FOR BASE



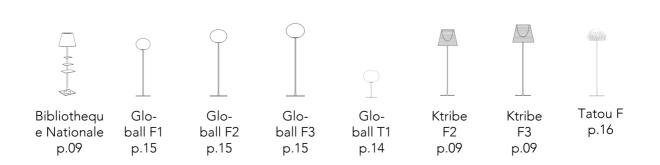

GLO-BALL F1 F3031031

EΝ

## RF3020100

KIT OF 5 WHITE FEED PADS FOR BASE

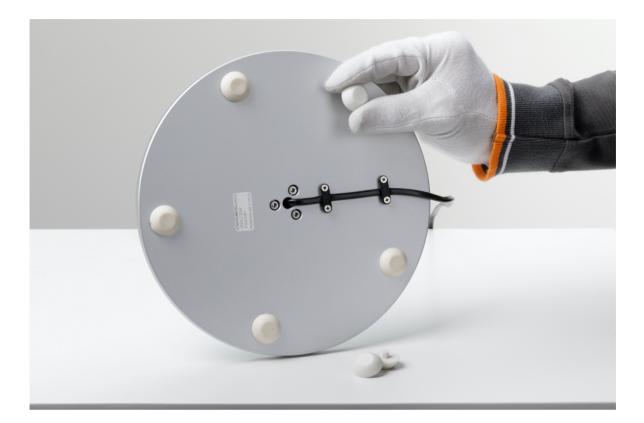


Fig.1

Glue the feet (A) to the base by utilizing glue. We advise to utilize the Loctite 454 glue.