


RF3320300

Kit with screw and allen keys

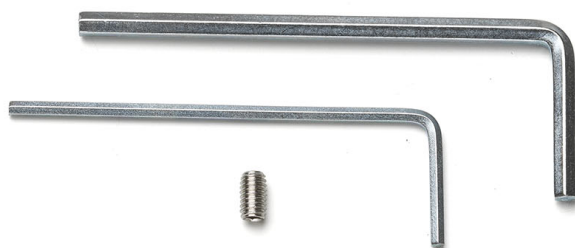

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF3320300

Kit with screw and allen keys

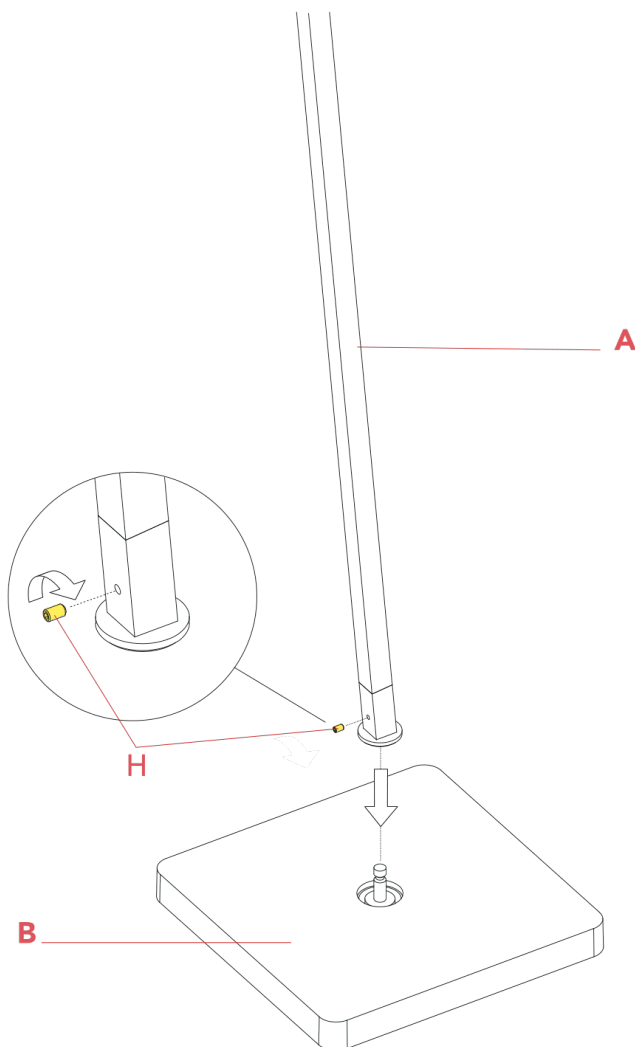


Fig.1

Insert the device support (A) into the pin (B) of the base and fasten the safety pin screw (H) through Allen key hex 1,5mm.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF3320300

Kit with screw and allen keys

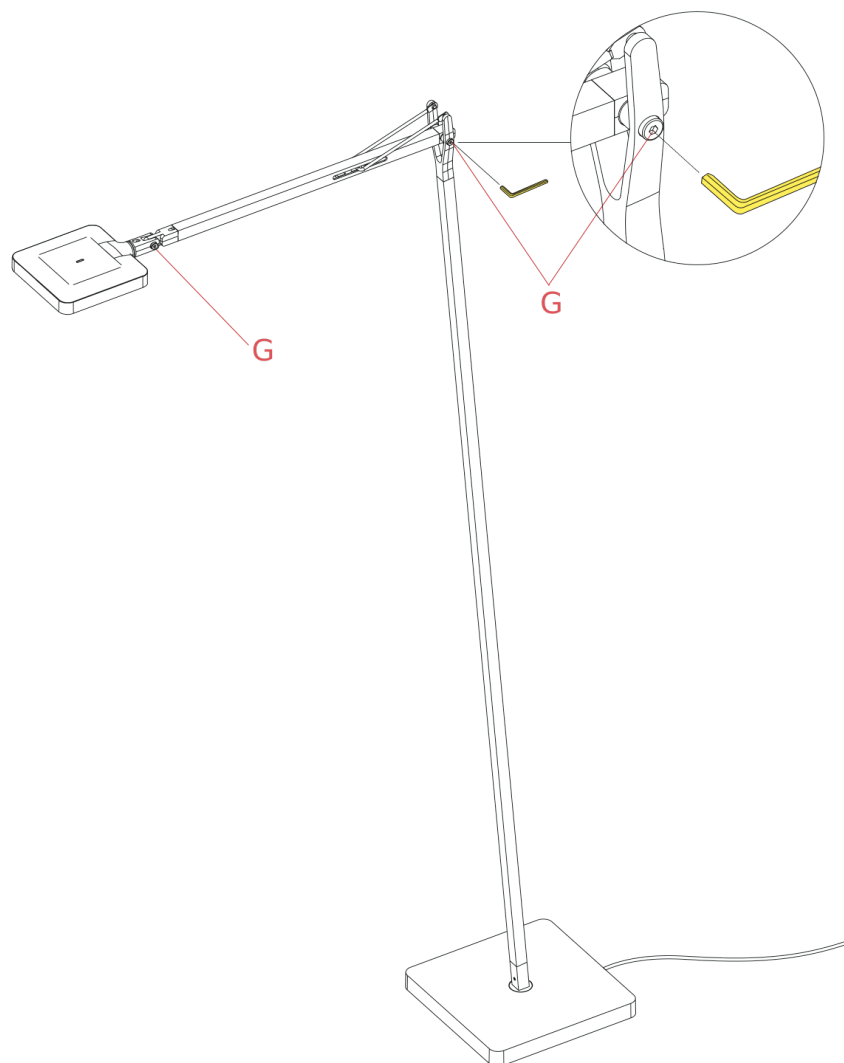


Fig.2

To adjust the balancing and structure of the device it is necessary to tighten or loosen the screws (G) with the Allen key hex 3mm supplied with the spare-part packet.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.