ΕN



ARCO F0300000

RF0300300

LAMP HOLDER WITH JOINT




ΕN



ARCO F0300000

RF0300300

LAMP HOLDER WITH JOINT

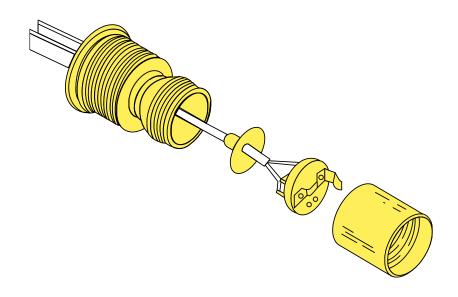



Assemble the joint (D) to the small channel by locking the joint through the lateral screw.

Unscrew the lamp holder (A) and connect the cables to the fitting (B), ensure to insert the cable through the hole of the insulator (C).

REMARK!!! Make sure that the Neutral wire (the blue one) corresponds with the lamp holder's lateral connection; the Live wire (the brown one) needs to correspond with the lamp holder central connection.