

ΕN

RF01395

WHITE LAMP HOLDER WITH REFLECTOR SUPPORT ASSEMBLY





ΕN

RF01395

WHITE LAMP HOLDER WITH REFLECTOR SUPPORT ASSEMBLY

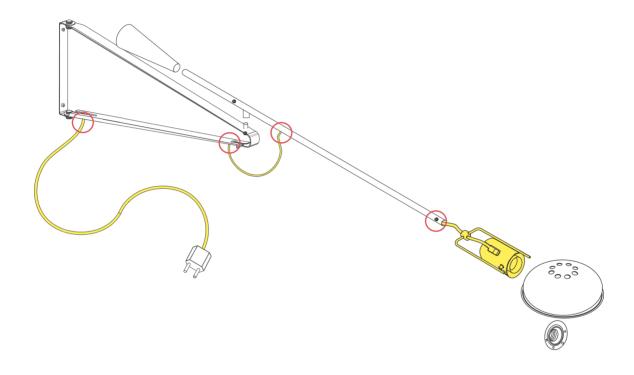


Fig.1

To assemble the reflector assembly (highlighted in yellow in the image), it is necessary to loosen all the 4 screws of the cable tighteners (refer to red circle in the image), then insert the cable in the stem (we recommend to start by inserting the electrical cable from the reflector hand side). Once inserted the cable in the stem it is necessary to insert the cable inside the triangle bracket.